



# AirMap™

INSTALLATION AND  
OPERATION INSTRUCTIONS

VERSION 3.3

**LOWRANCE**  
**AVIONICS™**   
A Division of LEI

Copyright © 1996, 1997 Lowrance Avionics  
All rights reserved.

Lowrance® is a registered trademark of Lowrance Electronics, Inc.  
IMS SmartMap™ is a trademark of Lowrance Electronics, Inc.  
Jeppesen® is a registered trademark of Jeppesen Sanderson, Inc.

### **WARNING!**

**USE THIS MAPPING UNIT ONLY AS AN AID TO NAVIGATION. A CAREFUL NAVIGATOR NEVER RELIES ON ONLY ONE METHOD TO OBTAIN POSITION INFORMATION.**

**Never use this product while operating a vehicle.**

The background map built into this unit is not intended for navigation and its accuracy has not been verified. This map is derived from U.S. government sources which rely on ground and aerial surveys and satellite data. Since there can be inaccuracies in the data used to create the maps and in the map's resolution, plus position inaccuracies in the navigation system, use caution when using this product.

### **CAUTION**

When showing navigation data to a position (waypoint), this unit will show the shortest, most direct path to the waypoint. It provides navigation data to the waypoint regardless of obstructions. Therefore, the prudent navigator will not only take advantage of all available navigation tools when travelling to a waypoint, but will also visually check to make certain a clear, safe path to the waypoint is always available.

The storage temperature for your unit is from -4 degrees to +167 degrees Fahrenheit (-20 to +75 degrees Celsius). Extended storage temperatures higher or lower than specified will cause the liquid crystal display to fail. Neither this type of failure nor its consequences are covered by the warranty. For more information, consult the factory customer service department.

All features and specifications subject to change without notice.  
All screens in this manual are simulated. Many were taken with an IMS SmartMap™ loaded into one of the cartridge slots.

INTRODUCTION .....	1
INSTALLATION .....	2
BATTERY INSTALLATION .....	3
EXTERNAL POWER .....	4
ANTENNA .....	5
REMOTE ANTENNA MOUNT .....	5
MAP CARTRIDGE INSTALLATION .....	6
REMOVING MAP CARTRIDGE .....	7
YOKE MOUNT .....	8
KEYBOARD .....	9
OPERATION .....	10
TURNING POWER ON .....	10
MENUS .....	10
<b>FINDING YOUR POSITION .....</b>	<b>10</b>
<b>COLD START .....</b>	<b>10</b>
<b>INITIALIZATION .....</b>	<b>11</b>
ENTER BY MAP .....	11
ENTER MANUALLY .....	13
POSITION/NAVIGATION DISPLAYS .....	14
NAVIGATION SCREENS .....	15
CDI INDICATOR .....	16
MAPPING SCREENS .....	17
AUTOZOOM .....	19
MAP CURSOR .....	20
MAP SYMBOLS .....	21
OBSTRUCTIONS .....	21
AIRSPACE .....	23
AIR MAP OPTIONS .....	24
MAP ORIENTATION .....	25
EARTH MAP OPTIONS .....	26
C-MAP OPTIONS .....	28
PLOTTER OPTIONS .....	29
ICONS .....	31
WINDOWS .....	33
REPROGRAM WINDOW GROUPS .....	33
SATELLITE INFORMATION SCREEN .....	35
DUAL MAPPING .....	37
CLOCK .....	37
TIMERS .....	39
REPROGRAM BOXES .....	40
DATABASES .....	42
SAVING PRESENT POSITION AS A WAYPOINT (QUICK SAVE) .....	46
SAVING CURSOR POSITION AS A WAYPOINT .....	47
SAVING PRESENT POSITION AS A WAYPOINT (SELECT WAYPOINT #) .....	47
SAVING CURSOR POSITION AS A WAYPOINT (SELECT WAYPOINT #) .....	47
EDIT WAYPOINT LAT/LON .....	48
WAYPOINT NAMES .....	48
WAYPOINT ICONS .....	49
DELETE A WAYPOINT .....	49
MOVE A WAYPOINT .....	50
DISTANCE BETWEEN WAYPOINTS .....	50
WAYPOINT OPTIONS .....	51
ROUTES .....	51
SELECT WAYPOINTS - WAYPOINT LIST .....	52
SELECT WAYPOINTS - FROM MAP .....	53

FINISHING THE ROUTE .....	53
FOLLOWING A ROUTE .....	54
DELETE A ROUTE .....	55
NAVIGATION .....	55
NAVIGATE TO A DATABASE LOCATION .....	55
NAVIGATE TO CURSOR POSITION .....	56
NAVIGATE TO A WAYPOINT USING THE MAP .....	56
“NEAREST” .....	57
CANCEL NAVIGATION .....	58
SYSTEM SETUP .....	58
TRACK HOLDING .....	58
GPS CORRECTIONS .....	59
DATUM .....	59
PCF (POSITION CORRECTION FACTOR) .....	60
UNITS OF MEASURE .....	61
POSITION FORMAT .....	61
NMEA/DGPS .....	62
SERIAL COMMUNICATION SETUP .....	65
RESET OPTIONS .....	65
RESET GROUPS .....	65
SYSTEM INFO .....	65
NAME INPUT .....	66
GPS SETUP .....	66
GPS UPDATE RATE/BATTERY SAVE .....	67
POSITION PINNING .....	67
EXECUTE GPS SELF-TEST .....	67
EXECUTE GPS COLD START .....	68
ALARMS .....	69
MESSAGES .....	70
BACKLIGHT .....	71
CONTRAST .....	72
SPEAKER ON/OFF .....	72
SIMULATOR .....	72
E6B COMPUTER .....	74
BATTERIES .....	76
DEFINITION OF TERMS/ABBREVIATIONS .....	76
JEPPESEN UPGRADE .....	77
WINDOW BOXES .....	78
WINDOW GROUPS .....	80
UPS RETURN POLICY .....	82
WARRANTY .....	84
DATABASE LICENSE AGREEMENT .....	85
DATABASES LIMITED WARRANTY .....	86
HOW TO OBTAIN SERVICE - INTERNATIONAL .....	INSIDE BACK COVER
HOW TO OBTAIN SERVICE - U.S.A. ONLY .....	BACK COVER

## **INTRODUCTION**

Thank you for purchasing a Lowrance Avionics AirMap™. With its large LCD screen, easy to use menus, and outstanding performance, we think you'll be happy with your AirMap for many years. No other handheld GPS receiver on the market today has the AirMap's combination of 12 channel receiver, Jeppesen® database with obstacles (U.S. only), ground and hydrographic mapping cartridge capability, and programmable screens in a handheld unit.

Like most GPS receivers, your AirMap doesn't have a compass or any other navigation aid built into it. It relies solely on the signals from the satellites to determine its position. Speed, direction of travel, and distance are all calculated from position information. Therefore, in order for it to determine the direction you're travelling, you must be moving, and the faster - the better. This is not to say the unit won't work at walking speeds - it will. But the faster you travel, the easier it is for the unit to determine your direction.

GPS works from satellites that transmit information to the world at very high frequencies. One disadvantage to this frequency is that it's "line-of-sight". In other words, the signals don't bounce around like your local radio or television. If you don't have a clear view of the sky, or if you're inside a metal building, the unit probably won't be able to pick up the signals from the satellites. This is common among all GPS receivers. We have found that using this product inside an aircraft is usually sufficiently close to the windows and windshield that it works well. However, the included remote antenna bracket and cable (model PA-2) lets you mount the removable antenna on top of the dash, in case it's required.

Another factor that influences the GPS' position and navigation capabilities is called selective availability or SA. This is small errors purposefully injected into the transmitted signal from the satellites. The government does this to degrade the system's accuracy to civilian and foreign users.

Even with SA, GPS is the most accurate navigation system ever invented on such a large scale. The Government's accuracy specification is 100 meters horizontally and 150 meters vertically 95% of the time. In other words, the position shown on your AirMap could be up to 100 meters in any direction from your actual position, and the altitude could be plus or minus 150 meters from what's shown on the screen, 95% of the time.

One way around the S/A problem is to purchase a DGPS receiver and connect it to your AirMap. A DGPS receiver (commonly called a beacon receiver), picks up correction signals broadcast from ground stations. The


AirMap takes these corrections and applies them to the position and altitude screens, giving you much better accuracy. Even with S/A on, and without a DGPS receiver, your AirMap gives you outstanding position and navigation information.

Please sit down with the unit and this manual and familiarize yourself with them before using this unit in the "real world". A simulator is built in, which lets you practice with the receiver.


## INSTALLATION

The AirMap operates from six AA batteries or from 6 to 35 volts DC. The cigarette lighter adapter included with your unit plugs into virtually any aircraft's electrical system. The AirMap automatically switches to external power when it's plugged into the unit (provided that the external power has a higher voltage than the batteries.) If, for any reason, the external power fails, the unit will automatically switch to the batteries. The AirMap does not require batteries when external power is in use, however they make a good backup in case of power failure. A rechargeable battery pack, (optional) has a nickle-metal hydride battery and charger built into a pack that's almost identical to the alkaline battery pack that slides onto the bottom of the AirMap.

An external antenna kit supplied with the unit allows the removable antenna to be mounted on a suction cup bracket up to four feet away from the GPS receiver.

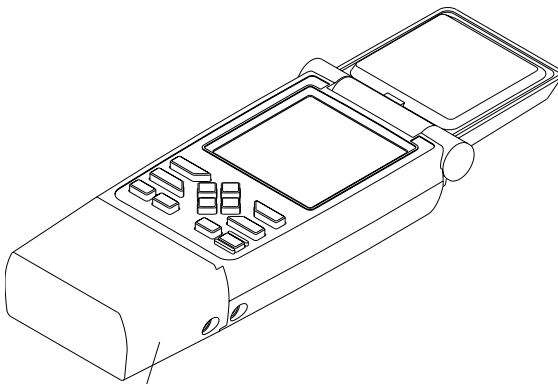

NiMH BATTERY

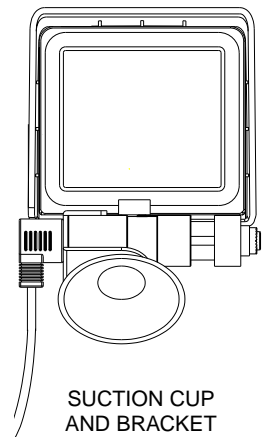

SUCTION CUP  
AND BRACKET


## BATTERY INSTALLATION

The AirMap requires six AA batteries. We recommend DURACELL® alkaline batteries, but other brands will work. You can use lithium batteries which will last longer than alkaline batteries (but cost more) or rechargeable ni-cad batteries (won't last as long as standard alkalines). Rechargeable alkaline batteries such as RayOVac® Renewals® will also work .



Do not use heavy-duty batteries or any battery other than the ones listed above. Do not mix different types of batteries. (For example, don't use both alkaline and ni-cad batteries at the same time.)

To install the batteries, first turn the AirMap so that it is facing you. Now grasp the bottom part of the case and push it to the right until it comes

completely off the unit. The bottom part of the case holds the batteries. Next, push the battery holder out the bottom of the battery cover as shown below. Install each battery with the negative end (-) against the spring. The positive end (+) of each battery should be firmly against the metal plate. When all six batteries are installed, slide the battery holder into the battery cover.

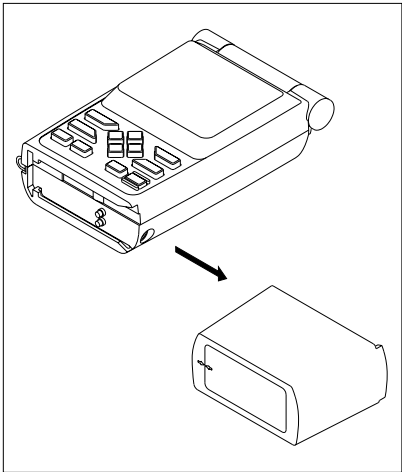

If the battery holder sticks when sliding into the battery cover, apply a thin film of petroleum jelly to the "O" rings on the battery holder.

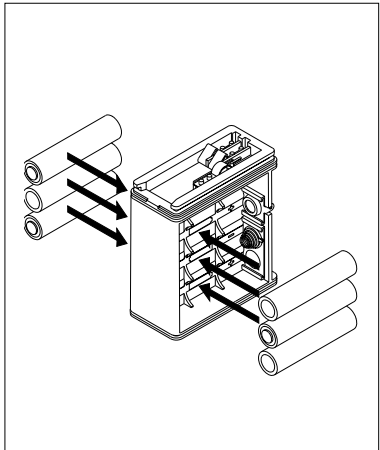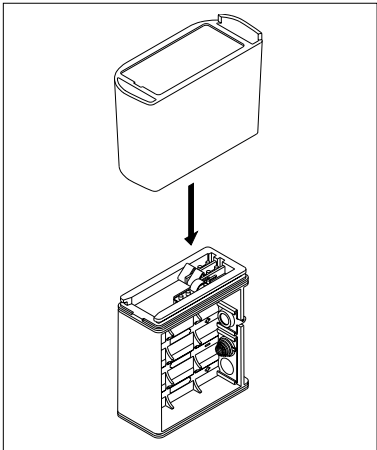

## IMPORTANT!

There are arrows molded into the bottom of the battery cover and battery holder. Make certain the arrows are properly aligned! Otherwise, the battery holder won't slide all the way into the cover and the battery pack won't slide onto the unit.


Slide the battery pack onto the unit and the AirMap is ready for use.

## EXTERNAL POWER

Instead of batteries, the AirMap can operate on 6 to 35 volts DC from an external power source. To use external power, an adapter cable is supplied with your unit that will plug into your vehicle's cigarette lighter. To use this cable, simply plug one end into the AirMap and the other end into the cigarette lighter. A rubber plug is supplied with your AirMap to cover the external power jack on the side of the unit when it's not in use.

You can leave the battery pack on when using external power, no damage to the batteries or the unit will occur. However, if you remove the battery pack from the AirMap, we recommend that the battery contact cover be placed onto the battery pack as shown below. This will prevent the battery pack contacts from shorting against metal objects.


A separate cover is provided for the bottom of the AirMap.

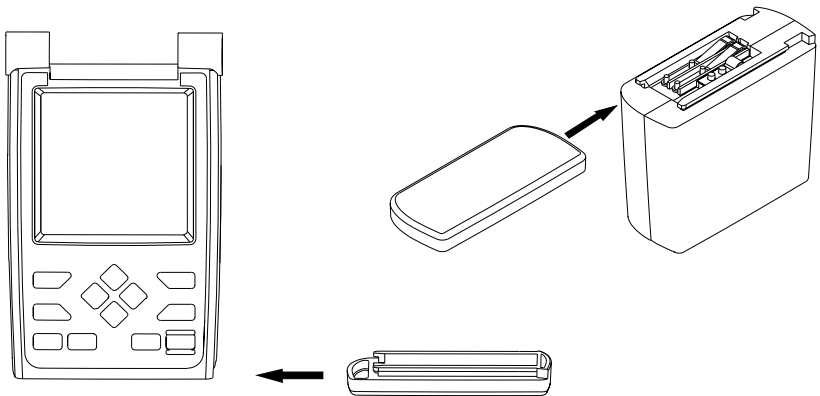



## ANTENNA


Your AirMap has a removable antenna that folds over the display when the unit is not in use. This prevents damage to the display. To open the antenna, simply lift on an edge and raise it to the desired position. The antenna is a quick release design, simplifying its removal and installation. To remove the antenna, push the antenna to the right (1), while simultaneously moving the antenna up (2), until it clears the AirMap's right side (3). To replace the antenna, reverse the above steps. Make certain to align the antenna with the AirMap until the antenna slides into place to the left by itself. When it does, the antenna has mated with the connector inside the unit and it's ready for use.

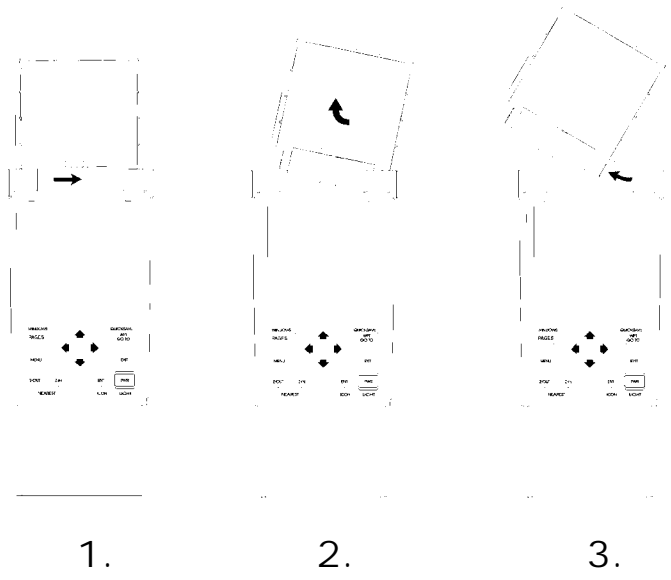

## Remote Antenna Mount

The remote antenna kit lets you mount the AirMap's antenna up to four feet away. The suction cup mount can be installed on virtually any flat surface.

First press the suction cup into the hole in the bottom of the bracket. Next, remove the antenna from the AirMap and slide the suction cup bracket over the antenna as shown at right. Press the antenna cable


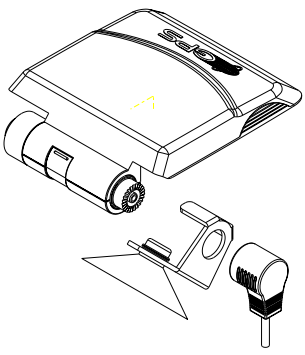


over the suction cup bracket and onto the antenna. This locks the bracket onto the bracket with a friction fit. Press the other end of the cable firmly onto the AirMap's left antenna mounting bracket. Moisten the suction cup and press it onto any clean, smooth surface. The unit is now ready for use.

### MAP CARTRIDGE INSTALLATION

The AirMap uses Jeppesen®, IMS SmartMap™ and WorldMap™, and C-Map™ cartridges, all of which are packaged in a cartridge housing specifically designed for Lowrance mapping products.

The IMS SmartMap™ cartridges contain digitized data of over 120,000 bodies of water. Nearly all inland waterways-public and private lakes, rivers, and streams, plus coastal United States waters up to 25 miles out are included. There are also state and U.S. interstate highways and routes, cities and towns. These inland mapping cartridges cover the entire continental United States in 64 highly detailed cartridges. The WorldMap™ cartridges cover all other areas of the world, showing more detail than the background map, but not as much as the SmartMap™ areas.

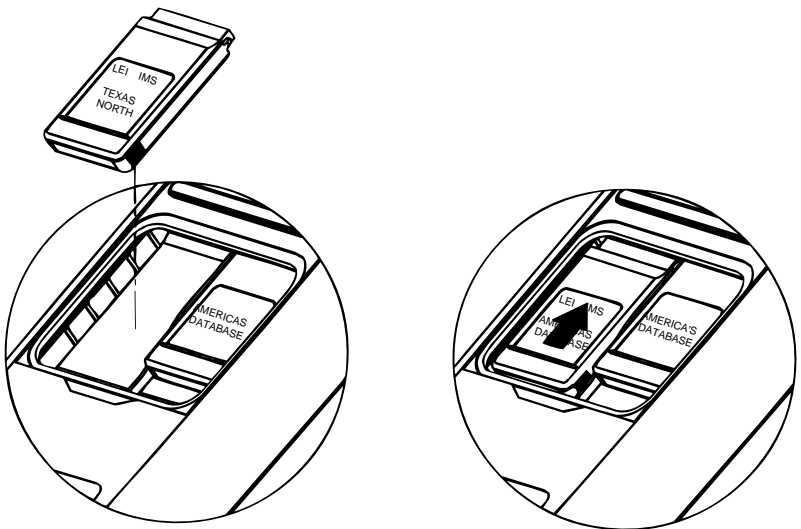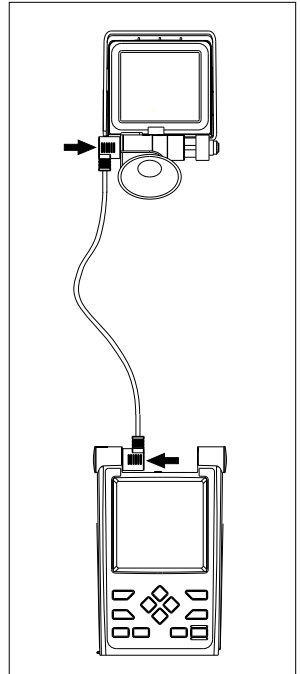


The C-Map cartridges cover most of the world with detailed views of coastal and some inland waters. Over 600 cartridges are available.

The Jeppesen® database cartridge contains the location of VOR's, NDB's, intersections, and airports. It also has airport information such as runway length and widths, frequencies, fuel availability, and more. These cartridges can be updated every 28 days. See page 80 for Jeppesen database update information.

To install a cartridge into the AirMap, *first make certain the unit is turned off.* **Never install or remove a cartridge with the unit turned on!** You can damage your unit if you install or remove a cartridge with the unit turned on. Next, pry the cover off the back of the unit. Place the cartridge into either slot with its label facing you as shown at the bottom of the previous page. Now slide the cartridge towards the top until it stops. Replace the cover.

### REMOVING A CARTRIDGE

If you have difficulty removing a cartridge, use the back cover as a removal tool. Simply press one side of the cover against the ridge on the cartridge and gently push towards the bottom of the unit. Don't use a corner of the cover - it could damage it.

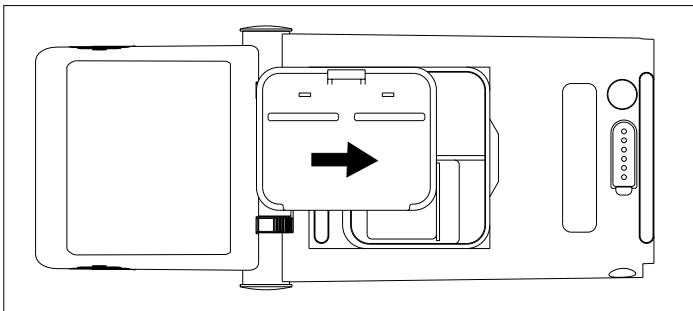

### IMPORTANT!



If you unplug the Jeppesen cartridge and turn the AirMap on, or if you swap your Jeppesen cartridge for a newer one, *all routes are erased!* No waypoints will be erased - only routes. Make certain to write down any stored routes before swapping cartridges.

## YOKE MOUNTING

Included with your AirMap is a yoke mounting bracket. It secures to the yoke's shaft with a clamp. Follow the instructions included with the yoke mount to assemble and attach it to your aircraft. The AirMap attaches to the yoke mount with hook and loop material which is already attached to the back of your unit. Simply press the AirMap onto the hook and loop material that's on the yoke mount.


Make certain to push the antenna back as far as it will go. It needs to be as parallel to the ground as possible in order to receive signals from the satellites. See the drawings below for a typical installation.

When the AirMap is attached to the yoke mounting bracket, it can operate from batteries or the external power cord. To use the external power cord, simply plug one end into the power connector on the right side of the AirMap and the other end into the aircraft's cigarette lighter.

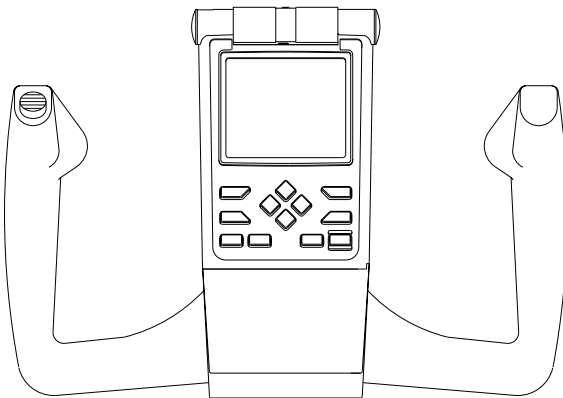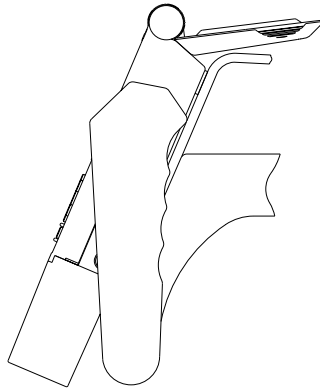

## KEYBOARD

The keyboard has twelve keys. The arrow keys are tied to most of the features, letting you easily move the mapping cursor, navigate through the menus, make selections from menus, and other tasks.

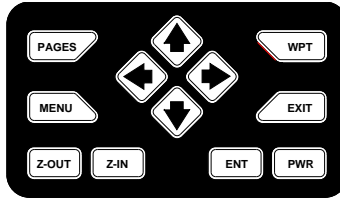

The WPT key lets you create, save, and recall waypoints and routes. The PAGES key switches the unit between the three major displays: windows, navigation, and mapping. To select different features, or to modify functions, press the MENU key. The Z-OUT and Z-IN keys zoom-out and zoom-in your view on the mapping screen. The ENT and EXIT keys let you enter or erase selections. The ENT key works the same as the right arrow key for selecting features. In other words, you can use the ENT key instead of the right arrow key to select a menu or enter data. The PWR key turns both the AirMap and its lights on and off.

Note: To prevent an accidental power shutdown, you must hold the PWR key down for a few seconds in order to turn the unit off.

## OPERATION

### Turning Power On

To turn the AirMap on, simply press the PWR key. A screen similar to the one at right appears. The database cartridge's name and expiration date appears at the bottom of this screen. Press the EXIT key to erase it. A warning message appears next, press the EXIT key to erase it, also.



## MENUS

Most of the adjustments and features are found on "menus". Pressing the MENU key lets you view the menus. Different menu items are added or subtracted to the basic list, depending on which mode (mapping, navigation, or windows) the unit is in. This gives you the features that are specific to the mode you are in, but also has items that are used on all modes.



To erase the main menu, simply press the EXIT key.

## Finding Your Position

### Cold Start

When it's turned on for the very first time, the GPS receiver doesn't know where it is, nor what the local time or date is. If you tell it your position, time, and date, the unit will take less time to lock-on to the satellites and give you a fix or position.

However, if you don't want to push buttons at this time, that's fine. The AirMap will lock onto the satellites and give you a position without any input from you. This is called a "cold-start". It simply means that the unit is searching without your help for the satellites that are in orbit. A cold-start can take up to 5 minutes to acquire enough satellite data to determine your position, although it typically takes less time than that.

Once the GPS receiver locks on to the satellites and finds your position, it stores the satellite data in its memory. The next time you use the unit, it should take less time to lock on.

Once the AirMap locks on to the satellites and finds your position, it stores the satellite data in its memory. The next time you use the unit, it should take much less time to lock on.

To use your AirMap, first take it outside, away from hangers and buildings. You need a clear view of the sky.

Open the antenna and adjust it so that it is parallel with the ground. Press the PWR key. Read the message on the screen, then press the EXIT key to erase the message. A screen similar to the one at right appears.

This is Map 3. Your present position is shown as a cross surrounded by a diamond. As you wait for the AirMap to find your position, you'll see numbers flashing on the display. Anytime you see flashing numbers, it means the AirMap does not have a position! Do not rely on any data that is flashing! When the numbers stop flashing, the unit has locked on to the satellites and the position is good.



That's all you have to do to find your position. The time display may not be correct when the cold start method is used. See the manual initialization section for details on changing the time.

## Finding Your Position

### Initialization

A cold-start as described above can take up to 5 minutes to find your position. There is another method to initialize the AirMap that may let it acquire the satellites faster. Manually entering your position, local time and date will help the GPS receiver determine which satellites are available and lock on to them faster. There are two ways to input your position. You can locate your position on the receiver's map or enter your latitude and longitude. Remember, once the receiver finds its position, it stores the position into memory. The receiver won't have to be initialized the next time you turn it on.

### Enter by Map

To show the receiver your approximate location on its map, first press the MENU key, then the up or down arrow keys until the "GPS SETUP" menu is highlighted as shown at right. Now press the right arrow key. The screen shown at the top of the next page appears.




Using the down arrow key, highlight the “Initialize GPS Receiver” menu, then press the right arrow key. The screen shown below appears next.




This is the GPS initialization screen. The position, altitude, time, and date the GPS receiver is currently using to find the satellites is shown at the bottom of this screen. Changing these values to your local position and time will speed the position lock.



To change the position, highlight the “EDIT LAT/LON” label, then press the right arrow key. A screen similar to the one at right appears. With the “INPUT FROM MAP” label highlighted, press the right arrow key. The screen below appears.

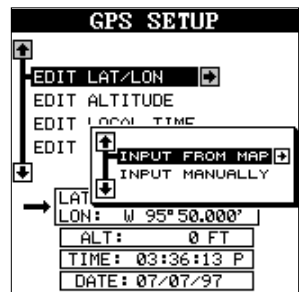

The mapping screen appears with two lines that intersect at the center. These lines are the cursor. Using the arrow keys, move the cursor to your present position. You can use the Z-IN and Z-OUT keys to zoom in or out to find your area on the map. Once you have the cursor close to your location, simply press the ENT key. The unit returns to the GPS SETUP menu with your local latitude and longitude showing in the box at the bottom of the screen.

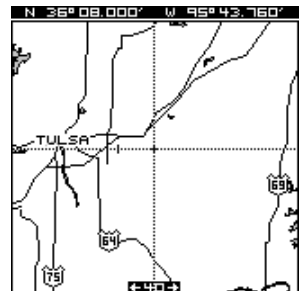



## Enter Manually

To change the position by manually entering the latitude and longitude, press the MENU key, then highlight the “GPS SETUP” label and press the right arrow key. Now press right arrow key again while the “EDIT LAT/LON” box is highlighted. The screen shown at right appears. Highlight the “INPUT MANUALLY” label and press the right arrow key. The screen shown below appears.



If your latitude is south, press the up or down arrow key to change it. If it is north, press the right arrow key to highlight the first number in the latitude.

Now press the up arrow key to increase the number or the down arrow key to decrease it. Once the first number in the latitude is set, press the right arrow key once to move to the next number in the latitude.



Keep pressing the arrow keys until the latitude and longitude are set to your local position. (Note: This position does not have to be very accurate. If you can get it within one degree of your actual position, that will be fine.) When it's set, press the ENT key. The AirMap accepts your entry and returns to the GPS setup menu.

Now change the local time and date if they're incorrect on this screen by highlighting the appropriate label and pressing the right arrow key. (Don't worry about altitude.) When everything is acceptable, press the EXIT key to return to a mode screen. The AirMap will instantly use the data you entered to find the satellites in the sky. (The unit knows which satellites will be available at the position, date, and time you entered. Therefore, it will only look for those satellites, making the search time much shorter than a cold start which looks for all of the satellites until it finds three.)



Once the AirMap finds and locks on to three satellites, it stops flashing the numbers on the display. (Note: Altitude will still flash until the unit locks on to the fourth satellite. It takes four satellites to determine altitude.)

## IMPORTANT!


If the data shown in digital numbers on any screen is flashing, it means that data is invalid. **DO NOT RELY ON ANY NUMBERS THAT ARE FLASHING!** Usually, this happens when the GPS receiver has lost its lock on the satellites. The data that is flashing was the last known when the unit lost its navigational capability.

## DO NOT NAVIGATE WITH THIS UNIT UNTIL THE DATA STOPS FLASHING!


### POSITION/NAVIGATION DISPLAYS

The AirMap has navigation, mapping, and windows group modes. These screens were designed to show data that is used most often. Many of the navigation, mapping, and windows screens can be customized to show data other than the ones chosen by the factory. See the Reprogram Groups section for more details.


The three default displays are shown below. To change displays, simply press the PAGES key. A screen similar to the one at right appears. Now press the up or down arrow keys to change modes. (The windows display is shown as "Groups". For example, Group A is the first windows group on the PAGES menu.) Press the right arrow key to see more screens on each mode. When the desired screen appears, press the EXIT key to clear the menu.

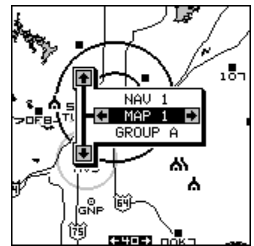

NAVIGATION  
(Nav 1)

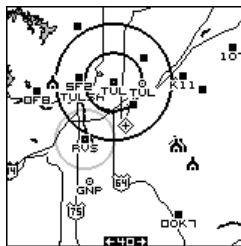

MAPPING  
(Map 1)

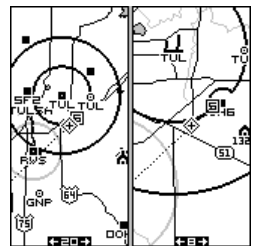

WINDOWS  
(Group A)

Note: For a list of abbreviations used on the displays, see the back of this manual.

# Navigation Screens

There are two navigation screens. Nav screen number one shows a graphical view of your trip, the other screen shows all navigation details in large digital numbers.

## Nav Screen #1

This screen is dominated by a compass rose. Your track (direction of travel) is indicated by an arrow pointing down toward the compass rose at the top center of the screen. Track is also shown in the upper right corner of the display under the "TRK" label. In the example screen shown at right, the track is 7°. The line extending behind the arrow in the center shows your track history.



Your speed over ground or Ground Speed is shown at the bottom of this screen. In this example, the ground speed is 140 knots. The screen looks like this when you're not navigating to a waypoint. (See page 58 for information on waypoint navigation.) If you navigate to a waypoint, the screen looks like the one below.

The bearing to the destination waypoint is shown in the upper left corner of the screen. Bearing is also shown by the large arrow pointing up to the compass.



The numbers on either side of the center arrow show the cross track error range. In other words, (using the screen at right as an example) if the arrow crosses the dark band on either side, you are one mile to the left or right of the desired course.

A circle depicting your destination appears on the screen as you approach the waypoint, as shown here.



The digital boxes at the bottom of the screen show (from left to right) your distance to go to the destination (DIS), estimated time en route (ETE), ground speed (GS), and course (CRS). Course (CRS) is the bearing from your starting location to your destination. (Remember,

course has nothing to do with your present position, except for your starting location.) It's shown as a dotted line on the NAV 1 display. This is shown as a reminder so that if you deviate from your original course, you can easily return to it. (A "course" is a proposed path over the ground. A "track" is your actual path over ground.)

All of the digital boxes on this screen are programmable. See the "Programming" section for more information.

## Nav Screen #2

The navigation screen shows navigation information in large digital numbers. To view this screen, press the PAGES key, then press the up arrow key until the black box surrounds the "NAV 1" label. Now press the right arrow key. A screen similar to the one below appears. Press the EXIT key to erase the menu.


This screen is composed of eight digital display boxes, including track (TRK), and ground speed (GS). The destination shows in the upper left corner. Other boxes show navigation data when a waypoint is recalled, including bearing to the waypoint (BRG), distance to waypoint (DIS), and estimated time en route (ETE). The CDI is a course deviation indicator, showing your distance to the left or right of the desired course.




You can reprogram all of the digital boxes on the NAV 2 screen. See the "Programming" section for more information.

## COURSE DEVIATION INDICATOR (CDI)

The CDI shows your distance to the left or right of the desired course to a waypoint. (In order to use the CDI, you must first recall a waypoint or route. See the Navigation section for more details.) The arrow in the center of the box shows the direction to the destination. For example, if you're travelling straight towards the waypoint, the arrow points straight up. If you turn to the right, the arrow points to the left, showing that the destination is to your left.

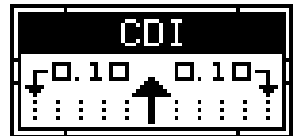

The smaller arrows pointing down on each side show the CDI's range. The default is 1/10 mile. The small vertical bar shows the distance off course and represents the course line. If the bar moves to the right, then you are to the left of the desired course line, and vice-versa. The CDI indicator shown above shows that we are about .02 miles to the left of the desired course. (With the CDI range of .10 miles, each vertical dotted line represents .02 mile.) You can adjust the CDI's range through the "Alarms/CDI" menu.

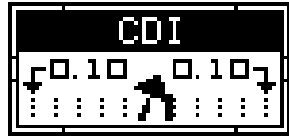

Using the CDI with a mapping screen helps you visualize your position in relation to the course. The screen below left shows that we are on course. The CDI arrow is pointing straight ahead and no off-course bar is showing. Looking at the screen on the right, however, you can see that we are off course to the right. In fact, we are so far off course that we exceeded the range of the CDI. The vertical bar has gone off the scale on the left side of the CDI. A small arrow points to the left, showing the direction to the desired course line. The CDI gives you a quick, easy to read visual indicator of your relationship between your direction of travel and the desired direction.




## Mapping


The AirMap has a ground map of the world built inside. This map has the majority of its detail in far southern Canada, the continental United States and Hawaiian islands, northern Mexico, the Bahamas, and Bermuda. The background map shows when the AirMap is first turned on, with or without a map cartridge.

With the Jeppesen® cartridge plugged in, a complete aviation database is activated. Airports, NDBs, VORs, and other airspace information (including obstructions) are overlaid onto the ground map.




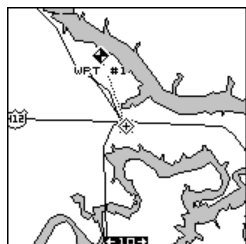

MAP 1

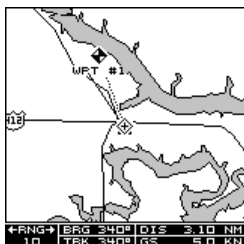

MAP 2

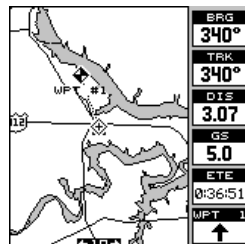

MAP 3


There are three different mapping screens available. Map screen number 3 shows by default, as shown at right. Your current position displays at the center of the screen by a cross surrounded by a flashing diamond.

To view the other mapping screens, press the PAGES key. Press the up or down arrow key to highlight the "MAP 1" label. Now press the right or left arrow key to select a different mapping screen. Press the EXIT key to erase the pages menu.



Maps 2 and 3 (as shown above) have navigation data displayed using digital numbers. The digital displays on map 3 can be rearranged or changed to other displays. See the "Reprogram Boxes" section for more information.

As you move, the map slides past your present position, which always remains at the center of the screen. The line extending from your position shows the path you've taken.

Use the Z-OUT and Z-IN keys to enlarge or reduce the mapping area. If you have an IMS SmartMap™ cartridge installed, it's detail typically begins showing when you zoom in to the 10 mile range.

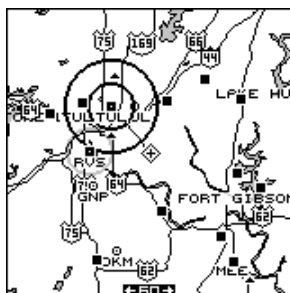

Jeppesen™ data shows at all zoom ranges, however, Lowrance® has a unique method of displaying this data. If you were to turn on all airports, VORs, NDBs, and controlled airspaces at the same time without filtering the data, the map screen would become so cluttered that it would be useless. The AirMap turns off virtually all aviation data at large ranges, selectively turning on more data as you zoom in closer to your present position or cursor location. See the two screens at the top of the next page. The first one's range is 150 NM and shows little aviation data. The second screen is zoomed in to the 30 NM range and now shows much more detail around the present position.

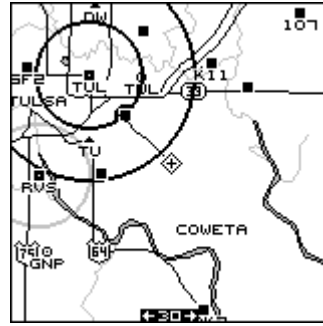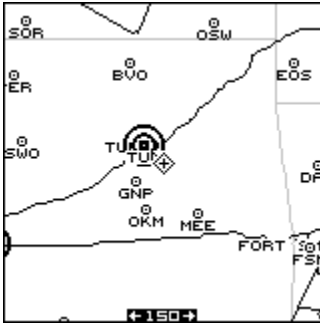







## AUTOZOOM

Generally, when you travel using a mapping receiver like the AirMap, you spend some amount of time zooming in and out, looking at detail or the whole route between the start and destination.

(Note: The autozoom feature does not work with C-Map cartridges.)

The AirMap has an autozoom feature that eliminates much of the button pushing that competitive units force you to make. It works in conjunction with the navigation feature. First you must recall a waypoint. (See the waypoint section for more information on navigating to a waypoint.) When you turn the autozoom mode on, the AirMap zooms in on your present position. As you travel towards the destination (recalled waypoint), the AirMap begins zooming out, showing more of your course to the waypoint. After you cross the halfway point to your destination, the AirMap zooms in closer, one zoom range at a time, keeping the destination on the screen. Nearly every time it zooms in, you can see more detail. This is a benefit for two reasons. Number one, you want to see more detail as you get closer to the destination, especially if you've never been there before. Two, it takes a load (small, perhaps, but still another thing to keep track of) while you're occupied with other details.

The screens at the top of the next page show a slice of the progression of a trip on an area lake. Screen number one is the start and is on the 1 mile range. Intermediate stages progressively zoom out, until you're at the mid-way point. The AirMap then begins zooming in as you get closer to the destination.

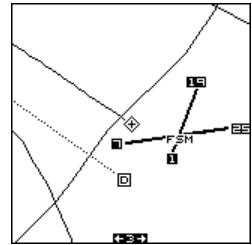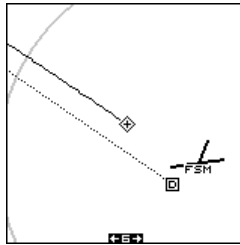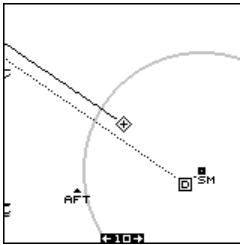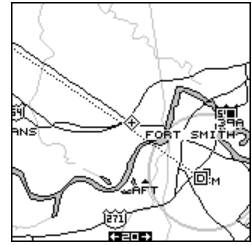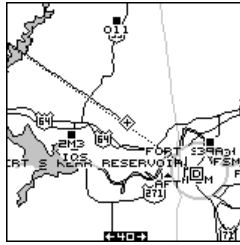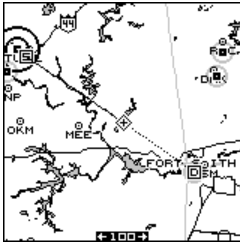


To use the autozoom feature, first set the AirMap up to navigate to a waypoint. (See the Navigation section for more details.) Next, simply press the MENU key, then use the up or down arrow keys to highlight the "AUTOZOOM OFF/ON" menu. Press the right arrow key to turn it on, the left to turn it off.


### Map Cursor

Pressing an arrow key while a map is on shows two dotted lines that intersect at your present position. These dotted lines are called a "cursor" and have a variety of uses.

You can move the cursor around the display by pressing the arrow keys in the direction you want it to move. This lets you view different areas of a map, away from your present position. When it's turned on, the zoom-in and zoom-out keys work from the cursor's position - not the present position, so you can zoom in on any detail, anywhere while navigating.

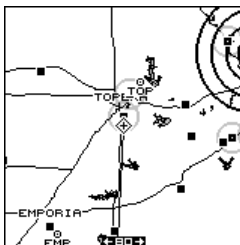

CURSOR OFF

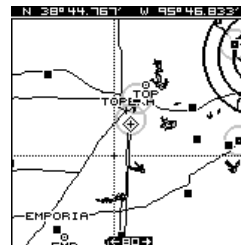

CURSOR ON




The latitude/longitude of the cursor shows in the box at the top of the screen whenever the cursor is activated. The map cursor is also used to place and erase icons and waypoints.

**MAP SYMBOLS**

**Airports, VORs, NDBs, and Intersections**

All airports are shown as a square with its identifier beneath it. Larger airports are shown the same way until you zoom in closer, then their runways become visible. Zoom in farther, and the runway numbers also appear. VOR's are shown as a circle with a dot inside, while NDB's have a triangle. Intersections are depicted as an "X".

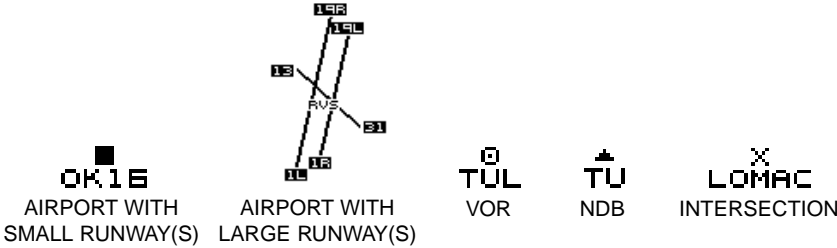


**Obstructions**

Your Airmap has obstruction capability. The database cartridge installed in your unit lets you see ground obstructions on the map display such as radio and television towers. This information is included in the Jeppesen® cartridge, so you don't need two cartridges for aviation data.

The obstruction portion of the database cartridge covers all of the continental United States, Alaska, and parts of Canada, Mexico, and Bahamas.

On the screen shown at right, four obstructions are shown. Three different symbols are used to show them, depending on their height. They are:

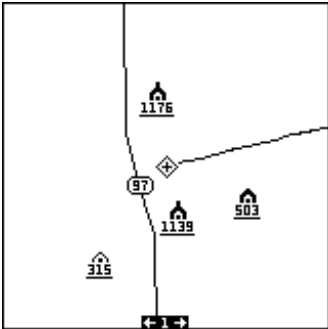



SMALL - 205 to 499 feet



 
MEDIUM - 500 to 999 feet



LARGE - 1000 feet and above


The elevation shows beneath the symbol. If a line is beneath the elevation, then the height is AGL, or above ground level. If no line shows beneath the height, then it is MSL or above mean sea level.

For example, this obstruction is

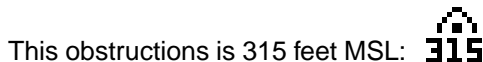

Typically, you'll need to zoom in to a range of 40 miles to see the large obstruction symbols, and smaller ranges to see the larger obstruction's height and smaller obstructions. To view smaller obstruction's height, you may need to zoom in to the 5 mile range.


You can turn the obstructions on or off and switch from AGL to MSL by highlighting the "OBSTRUCTIONS" label on the "Air Map Options" menu, then pressing the right arrow key. The obstruction menu appears as shown at right. The AirMap defaults are: obstructions from 205 to 499 feet (shown as 200-500 on the menu) off and obstructions 500 feet and above on. AGL defaults on, also. You can change any of these by highlighting the desired menu, then pressing the left or right arrow keys.

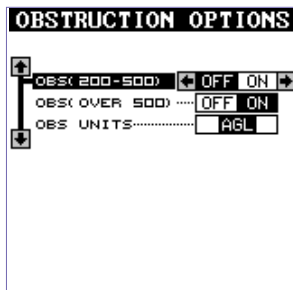

## Airspace


The AirMap can show the following airspaces: Class B and C airspace, control zones, control areas (CTA), Terminal Control Areas (TMA), prohibited, restricted, MOA's (including training, danger, and caution areas), and alert areas.

In this example, the Class C airspace surrounding Tulsa International airport (TUL) is clearly visible as two dark circles. The control zone airspace around Richard Jones (Riverside) airport (RVS) is shown in gray.

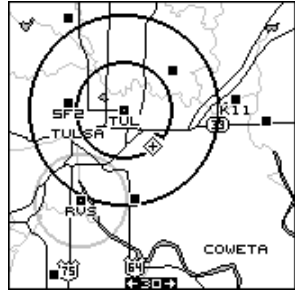

This screen shows the Eureka MOA east of Wichita, Kansas on the 100 nautical mile range.

The airspace defaults for the AirMap are as follows: Class B, C, D, Prohibited, Restricted, and MOA's are on. All other airspaces default off. An airspace alarm can be set that will warn you of any of the above airspaces are within a preset radius of your position. Another airspace alarm will "look-ahead" and tell you how soon you will cross into an airspace. See the alarms section for more information.

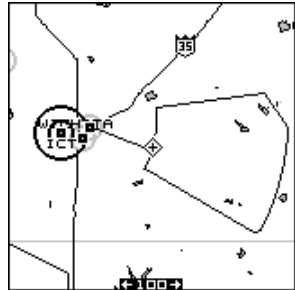


## Airspace Information

The AirMap lets you identify an airspace without physically entering it by using the cursor. To do this, press any arrow key while a map is showing. In this example, we're using Map 1. The cursor appears. Now move the cursor to the desired airspace as shown at right. (Note: You may have to zoom-in and/or zoom-out to view the airspace.)




With the cursor moved to the airspace, press the MENU key. A screen similar to the one at right appears.

Now highlight the "Airspace Info" label and press the right arrow key. A message screen appears as shown below.

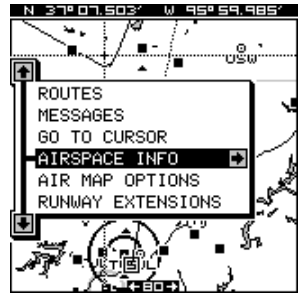

This is the information for the airspace that the cursor is resting on. To view information about another airspace, simply move the cursor to that airspace and repeat these steps. To erase this screen, simply press the EXIT key.

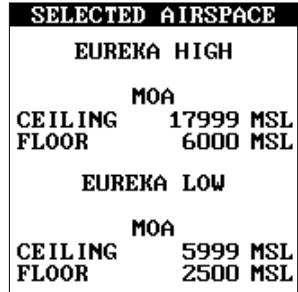

### Air Map Options


You can select the aviation symbols and airspaces that you want displayed on the screen. To do this, first press the MENU key, then press the up or down arrow keys until the black box is on the "AIR MAP OPTIONS" label. Press the right arrow key to select it. A screen similar to the one at right appears.

Use the UP and DOWN arrow keys to move the box to the desired symbol, then press the right arrow key to turn it on or the left arrow key to turn it off.



**Note: You can't turn off restricted or prohibited airspaces.**

To change the airspace selections, press the down arrow key until the "Select Airspaces" label is highlighted, then press the right arrow key. The screen shown at right appears.

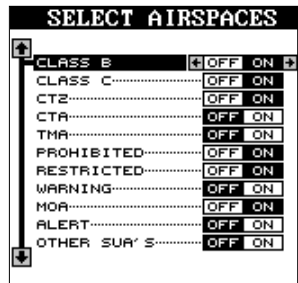

Again, use the up and down arrow keys to move the box to the desired airspace that you wish to change, then press the right arrow key to turn it on or the left arrow key to turn it off.

Press the EXIT key when you're finished with this menu page. The AirMap returns to the AirMap Options menu.

### Map Orientation

Normally, the AirMap shows the map with north always at the top of the screen. This is the way most maps and charts are printed on paper. This is fine if you're always travelling due north. What you see to your left corresponds to the left side of the map, to your right is shown on the right side of the map, and so on.

However, if you travel any other direction, the map doesn't line up with your view of the world.

To correct this problem, the AirMap has a track-up mode that rotates the map as you turn. Thus, what you see on the left side of the screen should always be to your left, and so on. It also has a course-up mode that keeps the map at the same orientation as your initial bearing to the waypoint.




NORTH-UP



TRACK-UP

In the example at the bottom of the previous page, we're travelling with a track of 200°. In the north-up view, the present position indicator appears to move towards the lower left corner of the screen. In the track-up view, the present position moves straight towards the top of the display. A "N" shows to help you see which direction is north when the track-up mode is on. Remember, the track-up mode, the screen rotates as you change direction. It always keeps your direction of travel (track) heading towards the top of the screen.

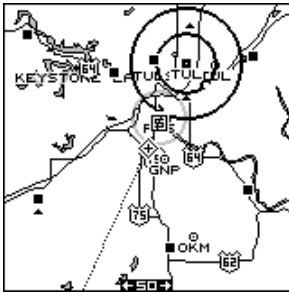

NORTH-UP



COURSE-UP

In the course-up mode, the screen is locked into your original bearing to the recalled waypoint, (user waypoint, airport, NDB, VOR, or cursor location) regardless of your track.

(Note: the track-up and course-up modes do not work when the unit is zoomed-in on a C-Map cartridge.)

To select the desired mode, press the up or down arrow keys to move the black box to the "UP ORIENTATION", then press the right arrow key to select it. Press the EXIT key to return to the mapping screen.

### EARTH MAP OPTIONS

The earth map consists of the built-in background map of the world, plus any cartridge that is attached to the AirMap. To change the Earth map options, first press the MENU key, then press the up or down arrow keys until the Earth Map label appears. Highlight the label, then press the right arrow key to select it. The screen shown at right appears.



## Text Labels

Use this menu to turn all names on the map (such as Lake Tahoe or Mississippi River) off or on. The default is “on”. Press the left arrow key to turn them off.



## Map Boundaries

If you have a IMS SmartMap™ or a C-MAP™ cartridge plugged into the back of the AirMap, this feature will show the boundaries of the cartridge on the map. This lets you know the exact area covered by your cartridge. The example at the top of the next page shows the boundaries of the Oklahoma - East IMS SmartMap cartridge. The default for this feature is on. Press the left arrow key on the “MAP BOUNDS” label to turn them off.

## Move Map Center

In normal operation, the present position indicator stays in the center of the screen and the map moves past it as you travel. To move the present position indicator to a different part of the screen, highlight the “Move Map Center” label on the “Earth Map Options” menu and press the right arrow key.



The unit returns to the mapping screen with the message “Set Map Center” flashing at the bottom of the screen. Use the arrow keys to move the present position indicator to the desired location on the screen, then press the EXIT key. This locks the present position indicator in this location.



The above examples show the present position in the center of the screen, then moving the present position down and to the left. This shows more of the lake.

## Earth Map On/Off

You can turn the earth map completely off, clearing the screen of all ground detail (including IMS SmartMap cartridge detail). To do this, highlight the “EARTH MAP OFF/ON” label and press the left arrow key.

## Icons On/Off

The AirMap has symbols that you can place at any location. These symbols can be turned off, if desired. To do so, move the black box to the “ICONS OFF/ON” label and press the left arrow key. See the “ICONS” section in this manual for more information on the icon symbols. Note: This doesn’t erase the icons, it merely “hides” them.


## Detail Cartridge

The AirMap has two cartridge slots in its back. Either one can hold a IMS SmartMap or C-MAP cartridge. The unit can only show detail from one type of cartridge at a time. In other words, you can’t show detail from an IMS SmartMap and a C-MAP cartridge at the same time. You must select one or the other. The “Detail Cartridge” menu lets you select the type of cartridge to display. When you install a mapping cartridge, and wish to use it, switch the “Detail Cartridge” to the desired selection on this menu. To do this, simply highlight the menu, then press the left or right arrow keys to select the proper cartridge type.

## C-MAP OPTIONS

If you are using this receiver with a C-Map cartridge, a new menu appears on the main menu list. This is the “C-Map Options” menu. Highlight this menu item and press the right arrow key. The screen at right appears.


These menu items let you turn the depth lines, restriction areas, coastal features, and marine navigation aids off or on. Highlight the desired feature, then press the right or left arrow key to change them. Press the EXIT key when you’re finished.

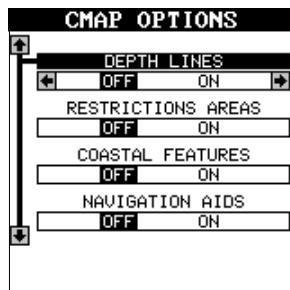




## Fill With Gray

When the AirMap is first turned on, all water is filled with gray to distinguish it from land, which is clear. (See below) To make the land fill with gray and water remain clear, press the down arrow key until the "Fill With Gray" menu is highlighted, then press the left arrow key. Press the EXIT key to return to the mapping screen.

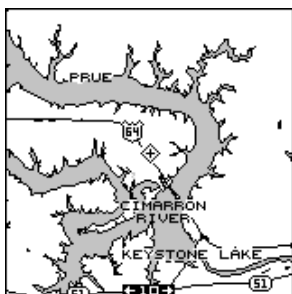

FILL WITH GRAY - WATER

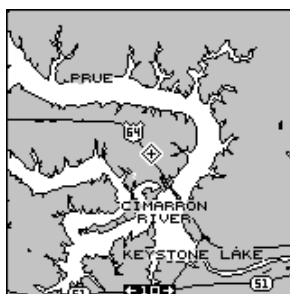

FILL WITH GRAY - LAND

Normally, you'll want to fill water with gray when you're using the GPS receiver on land and fill land with gray when you're using it on the water.

## PLOTTER OPTIONS


### Plot Trail

The line extending from your present position is called a plot trail. This unit lets you customize the plot trail with the following menu items. All of the items on the Plotter Options menu affect the plot trail.




### Plot Trail Flashing

Since there can be many lines on the mapping display, it's helpful at to make the plot trail flash. This usually makes it easier to see. The default for plot trail flashing is on. To turn it off, highlight the "Plot Trail Flashing" label on the "Plotter Options" menu, then press the left arrow key. Press the EXIT key to return to the map. Repeat the above steps to turn the flashing on.

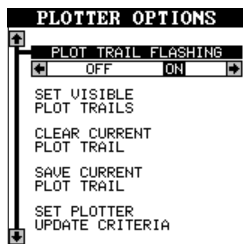

### Set Visible Plot Trails

The plot trail can be turned off, if desired. To turn it off, press the up or down arrow key until the “Set Visible Plot Trails” menu is highlighted. Now press the right arrow key. The screen at right appears.

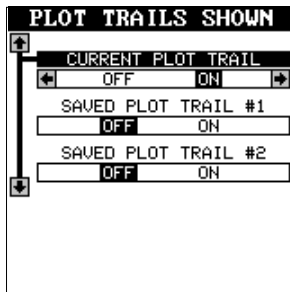

Use the up or down arrow keys to select the desired plot trail, then press the left or right arrow key. Press the EXIT key to return to the Plotter Options menu.


### Clear Current Plot Trail

To erase the plot trail extending from your present position, highlight the “Clear Current Plot Trail” menu, then press the right arrow key. A message box appears, asking you if you really want to erase the plot trail. Follow the directions on this message box. The unit returns to the mapping screen after the message box clears.

### Save Current Plot Trail

You can save up to two plot trails in memory. The receiver saves these trails even if power is removed from the unit.

To save your current plot trail, highlight the “Save Current Plot Trail” menu using the arrow keys. Now press the right arrow key. The screen at right appears.

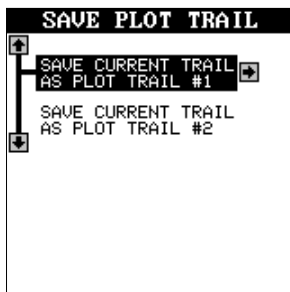

You can save the plot trail as #1 or #2. Highlight the desired plot trail number, then press the right arrow key. A message box appears asking you if you really want to save the trail. Follow the instructions in this box. The mapping screen appears after the message box clears. Your plot trail is now stored in memory.

To view your saved plot trail, see the “Set Visible Plot Trails” section.

### Set Plotter Update Criteria

The plotter places a dot on your trail as you move. It determines when to place a dot depending on two things: time and distance. By default, it places a dot every three seconds.


To change the update, highlight the "Set Plotter Update Criteria" menu item, then press the right arrow key. The screen at right appears.

To change the update to distance, press the right arrow key while the "Plot Update Criteria" menu is highlighted.

Change the plotter update time by highlighting the "Plot Update Rate" menu, then press the left or right arrow keys until the desired time appears.

The distance update is changed in the same manner. Highlight the "Update Distance" menu, then press the left or right arrow keys until the desired distance appears.

When you have everything on this menu adjusted to the desired settings, press the EXIT key to erase the menu.

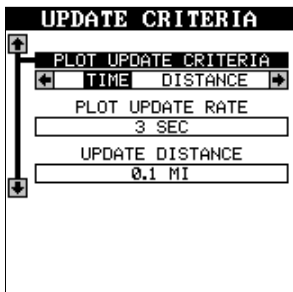


## ICONS

The AirMap has fifteen symbols or "icons" available. These icons can be placed anywhere on the mapping screens. These can be used to mark fishing spots, boat ramps, rest stops, airports, or whatever. You can place an icon at your present position, or at the cursor location.

### Place Icon - Present Position

To place an icon at your present position, simply press the ENT key. The screen shown at right appears. Use the arrow keys to highlight the desired icon. Now press the ENT key. The mapping screen appears with the icon you selected placed at your position when you first pressed the ENT key, not your present position.

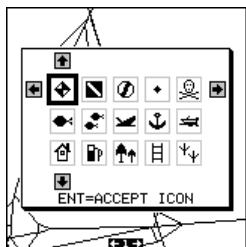

MAP - BEFORE PLACING  
ICON



MAP - AFTER PLACING  
ICON

## Place Icon - Cursor Location


To place an icon at cursor's location, first use the arrow keys to move the cursor to the position that you want to place the icon. Next, press the ENT key. Now select the desired icon using the arrow keys. When it's selected, press the ENT key. The mapping screen reappears with the icon at the cursor's location. Press the EXIT key to erase the cursor.



MOVE CURSOR TO  
LOCATION



PRESS ENT, SELECT  
ICON, PRESS ENT

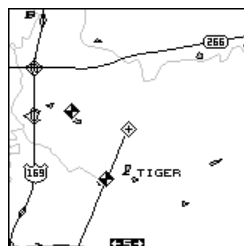


PRESS EXIT TO  
ERASE CURSOR

## Erase Icons

To erase an icon from the screen, first press the MENU key, then select the "Icon Options" menu as shown at right.

There are three methods used to erase icons from the screen. You can delete all of the icons, regardless of their position on the display, delete all of the icons of a certain type, or selectively erase individual icons. You can also simply turn the icons off by highlighting the "ICON SYMBOLS" menu, then pressing the left arrow key. This doesn't erase the icons, it simply "hides" them from the map.

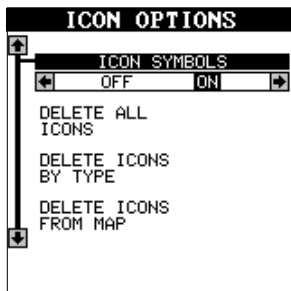

To erase all of the icons, highlight the "Delete All Icons" menu, then press the right arrow key. A message appears, asking you if you want to delete all icons. Press the left arrow key to erase them. The unit returns to the mapping screen with all icons deleted.


To remove only icons of a certain type, highlight the "Delete Icons By Type" label. Press the right arrow key. The icon selection menu appears. Use the arrow keys to highlight the icon style that you wish to erase. Press the ENT key when you're ready to erase the icons. A message appears, asking you if you want to delete the icons of that type. Press the left arrow key to erase them. The unit returns to the mapping screen with all icons of the type you selected erased.

To remove only certain icons, highlight the “Delete Icons From Map” label. Press the right arrow key. The unit returns to the mapping screen with the cursor centered on your present position. Use the arrow keys to move the cursor to the icon on the map that you wish to erase. Press the ENT key when you’re ready to erase the icon. A message appears, asking you if you want to delete that icon. Press the left arrow key to erase it. If you wish to delete another icon, move the cursor over it and press the ENT key. When you’re finished, press the EXIT key to erase the cursor.

**WINDOWS**

The windows feature gives you over 45 different displays that you can arrange in 15 different groups. This lets you customize the unit to your own situations.

To use the windows feature, press the PAGES key, then press the up or down arrow keys to highlight the “GROUP A” label as shown at right. The windows have 15 different pre-programmed groups: A through N. Group “A” is visible in the background when you switch to the windows groups. To view each group, simply press the right or left arrow key while the mode menu is showing. Each group shows in the background as you press the arrow keys. When you see the group you want to use, press the EXIT key to erase the mode menu.


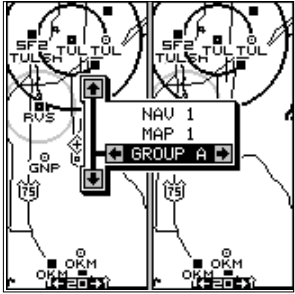


**REPROGRAM WINDOWS GROUPS**

All of the 15 windows groups can be customized. The changes you make to the groups will remain in memory, even if all power is removed from the unit. You can, however, return the groups to the factory settings from the “Preset Groups” menu.


To customize a group, first switch to a windows group. It doesn’t have to be the group you want to customize. Next, press the MENU key, then highlight the “Reprogram Groups” menu and press the right arrow key. A screen similar to the one shown at right appears.

The group selection menu is at the top of the screen. Using the left or right arrow keys, choose the group you want to change. When

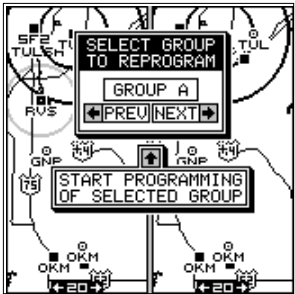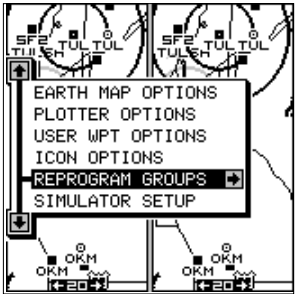


# REPROGRAMMING A GROUP

1.

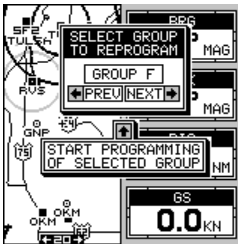


SELECTED "REPROGRAM GROUPS" FROM MAIN MENU. PRESSED THE UP ARROW KEY TO REPROGRAM GROUP "F".

2.

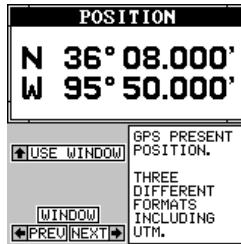


THE WINDOW SELECTION SCREEN APPEARS. PRESSED THE RIGHT ARROW KEY UNTIL THE DESIRED WINDOW APPEARS.

3.

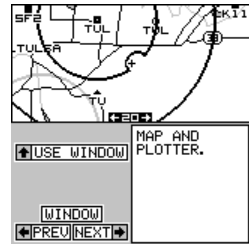

THIS IS THE FIRST WINDOW THAT WE WANT TO USE. PRESSED THE UP ARROW KEY TO SELECT IT.

4.

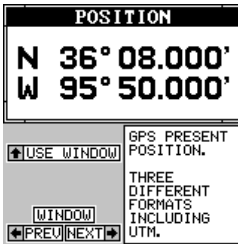


AFTER TWO MESSAGES APPEAR AND ERASE THEMSELVES, YOU'RE RETURNED TO THE WINDOW SELECTION MENU. REPEAT STEPS 2 AND 3.

5.




WE CHOSE THIS WINDOW AS THE SECOND ONE FOR THIS GROUP. REPEAT STEPS 2 AND 3 AGAIN.

6.

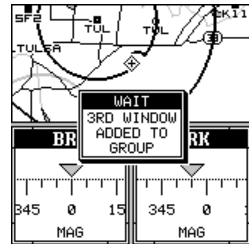


THE LAST WINDOW CHOSEN.

7.

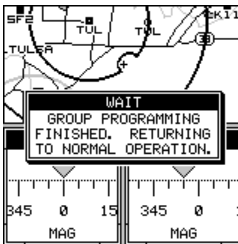

THIS MESSAGE APPEARS AFTER THE LAST WINDOW IS SELECTED FOR THE GROUP. IT AUTOMATICALLY ERASES.


8.

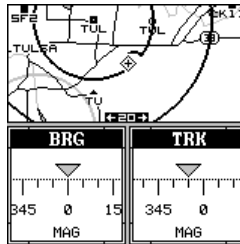

THE FINISHED GROUP. THIS IS THE NEW GROUP "F".

See the back of this manual for a complete listing of all window groups.

the desired group letter is showing in the box (and in the background), press the up arrow key to change it. A screen similar to the one at right appears.

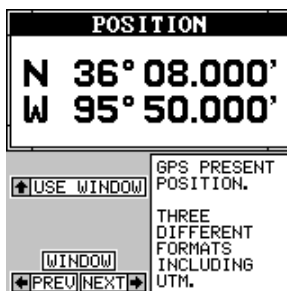

The first window appears on this screen. A description of the window appears in a box on this screen, also. If you wish to use it, simply press the up arrow key. The unit flashes a message on the screen, telling you it's adding the new window to the group. When it's finished, it returns to the window selection menu. You can now press the right or left arrow keys to select the next window in the group.

When you're filled the group with windows, the unit automatically saves your reprogrammed group. You can reprogram all groups, if desired.

If you're finished selecting windows *before* filling the group with windows, press the EXIT key. If you fill the group with windows, the unit will automatically leave the menu after the last window is selected.

To return all groups to the factory defaults, see the "Preset Groups" in the "System Setup" section.

**Note:** The digital boxes on the navigation and map #3 screens can also be reprogrammed. Follow the same steps show above to program the navigation and map screens. (The menu label is called "Reprogram Boxes" for the navigation and map screens.)

### Special Windows

Although most of the windows used in the AirMap are self-explanatory, there are several windows that have special features or can be used in unique ways. The following section describes these windows.

### Satellite Information Screen (Group O)

This screen shows technical information about the status of the GPS receiver. The receiver has five channels. Data for each channel is shown on the display. The channels are numbered one through 5 on the left side of the screen. Every satellite in the constellation has a number assigned to it, called the PRN. This number shows to the right of the channel. The TRK column shows a "T" if the channel is track-

SATELLITE INFO					
CHN	PRN	TRK	ELV	AZM	SNR
1	28	T	25°	44°	44
2	27	T	40°	312°	45
3	29	T	18°	170°	43
4	2	T	24°	264°	44
5	19	T	72°	340°	48

FIX		SATS	
FIX	9	SATELLITES IN VIEW	
HDOP	1.35	19 31 18 27	
GDOP	2.74	28 2 29	
PDOP	2.46		
VDOP	2.06		
TDOF	1.21		

ing the satellite, or a "S" if the receiver is searching for it. ELV is the elevation of the satellite above the horizon; AZM is the azimuth, or direction of the satellite from your location. SNR is the signal-to-noise ratio. The higher the SNR, the better.

SATELLITE INFO					
CHN	FRN	TRK	ELV	AZM	SNR
1	28	T	25°	44°	44
2	27	T	40°	312°	45
3	29	T	18°	170°	43
4	2	T	24°	264°	44
5	19	T	72°	340°	48

If you look at row one in the satellite info screen at right, channel 1 is tracking satellite number 28. The satellite's elevation is 25 degrees above the horizon and it's azimuth is 44 degrees. It's SNR is 44, which is good.

FIX		SATS		
FIX		SATELLITES IN VIEW		
FIX	9	19	31	18 27
HDOP	1.35			
GDOP	2.74			
PDOP	2.46	28	2	29
VDOP	2.06			
TDOP	1.21			

The FIX numbers in the lower left corner of the screen show the quality of fix. If the FIX is 9, then it's the best you can get. A FIX of 1 is the worst. The DOPS display beneath the fix quality show you the "Dilution of Precision" for the horizontal (HDOP), geometric (GDOP), position (PDOP), time (TDOP), and vertical (VDOP). The GDOP is a combination of HDOP, VDOP, and TDOP. The smaller the DOP's value, the better. The receiver selects satellites based on the GDOP value, therefore, it always tries to use satellites that have good DOP values. These depend on the azimuth and elevation of the satellite, and any ground based obstructions.


The circular plot in the lower right corner of the screen shows a graphical view of the satellites that are in view. Each satellite is shown on the circular chart relative to your position. The point in the center of the chart is directly overhead. The small inner ring represents 45° above the horizon and the large ring represents the horizon. North is at the top of the screen. You can use this to see which satellites are obstructed by obstacles in your immediate area if you hold the unit facing north.

The GPS receiver is tracking satellites that are surrounded by a black box. If the satellite number is not surrounded by a box, then the receiver hasn't locked onto that satellite and it isn't being used to solve the position.




## Dual Mapping

The windows feature gives you the capability to have more than one map on the display at one time. For example, group "A" shown at right has two half-screen maps, side-by-side. Both of these maps are completely independent of each other. In other words, you can zoom in or out, set options, and other functions on one map, without affecting the other.

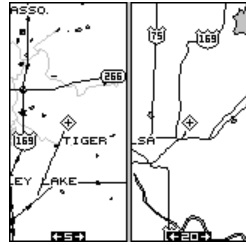


When you press the MENU, ZOOM IN or OUT, or ENT keys, a message appears asking you which display you want to affect. On the screen shown at right, the menu key was pressed. The unit wants to know which map you want to change. Press the left arrow key for the left map, the right arrow key for the right map. The main menu then appears.

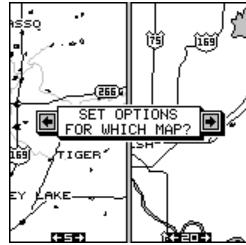

## CLOCK

Whenever a clock is showing on a display, new items appear in the list when you press the MENU key. These items let you set the clock's time, set alarms, and change the unit of measure. The clock and timers can be used on windows, mapping, or the navigation mode.

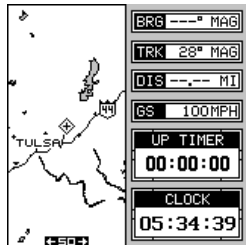

## Clock Set

If the time shown on the clock display is not your local time, change it using the “Clock Set” function. To do this, press the MENU key, then press the up or down arrow keys until the “Clock Set” label is highlighted. Press the right arrow key. The screen at right appears.

Using the right and left arrow keys, highlight the first number in the time that you want to change. Now press the up or down arrow keys until the desired number shows. Continue until the time shown in the display is correct, then press the ENT key. The unit returns to the navigation, mapping, or windows display with the new time showing.



## Clock Hours

Normally, the time shows in the twelve hour format (a.m./P.M.). To change it to 24-hour format, press the MENU key, then select the “CLK HRS” label. Now press the right arrow key to change it to 24, then press the EXIT key.

## Clock Alarm

You can set an alarm (that works just like an alarm clock), by using the “Clock Alarm” menu. To set this alarm, press the MENU key, then highlight the “Clk Alm Set” label. Press the right arrow key. A screen similar to the one at right appears. Using the right and left arrow keys, move the black box to the first number in the time that you want to set. Now press the up or down arrow keys until the desired number shows. Continue until the time shown in the display is correct, then press the ENT key. The unit returns to the navigation, mapping, or windows display.



To turn the alarm on, press the MENU key, then select the “CLK ALM” menu. Press the right arrow key. The alarm is now activated.

When the alarm goes off, an audible tone sounds along with a flashing message on the screen. Press the EXIT key to turn the alarm off.

Note: The AirMap must be on in order for the alarms to work. In other

words, if you set the alarm to go off at 7:00 a.m., then the AirMap will have to be on at 7:00 a.m., also.

### TIMERS



The AirMap has two timers built in. One is a countdown timer and the other is a count-up timer. The countdown timer counts down from the time you put in to zero. The count-up timer starts at zero and counts up to the time you entered.

To set either timer, first switch to a screen that is showing the timer that you want to use. Next, press the MENU key, then highlight the desired timer set menu. In this example, we're setting the countdown timer. Now press the right arrow key. A screen similar to the one below appears.

Using the right and left arrow keys, move the black box to the first number in the time that you want to set. (The time is in hours, minutes, and seconds) Now press the up or down arrow keys until the desired number shows. Continue until the time shown in the display is correct, then press the ENT key. In this example, the down timer is set for 10 minutes. The unit returns to the navigation, mapping, or windows display.

To start the timer, press the MENU key, then move the black box to the "Dn Timer STOP/GO" label. Press the right arrow key to start the timer. The timer continues counting until you stop it. If you turn the up timer's alarm on (press the right arrow key when the black box is on the (Up ALM...Off/On label), it will sound a tone when it reaches the time you entered in the up timer set menu. Press the EXIT key to silence the alarm.

You can reset either alarm to the time you originally set by pressing the MENU key, then moving the black box to either the "Up Timer Reset" or "DN Timer Reset" label, then press the right arrow key.

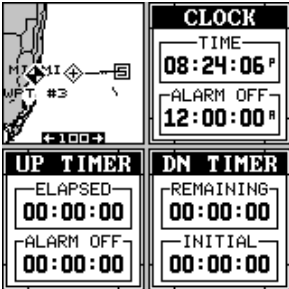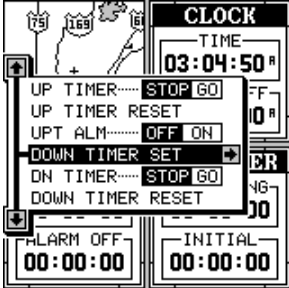

## REPROGRAM BOXES

The digital boxes on the MAP 3 and both NAV screens can be reprogrammed. The changes you make to the screen will remain in memory, even if all power is removed from the unit. You can, however, return the boxes to the factory settings from the “Preset Groups” item in the “System Setup” menu.

To customize a screen, first switch to the screen that you want to customize. Map 3 is used as the example on the next page. Next, press the MENU key, then press the up or down arrow key until the “Reprogram Boxes” menu is highlighted. Press the right arrow key. The screen shown as number two at the top of the next page appears.

The first window appears on this screen. A description of the window appears in a box on this screen, also. If you wish to use it, simply press the up arrow key. The unit flashes a message on the screen, telling you it’s adding the new window to the group. When it’s finished, it returns to the box selection menu. You can now press the right or left arrow keys to select the next box in the group.


When you’re filled the group with boxes, the unit will automatically save your reprogrammed group.

If you’re finished selecting boxes *before* filling the group, press the EXIT key. If you fill the group with boxes, the unit will automatically leave the menu after the last box is selected.

To return the group to its factory default, see the “Preset Groups” in the “System Setup” section.


# REPROGRAMMING BOXES

1.

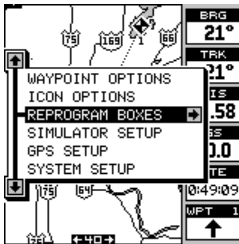


SELECT "REPROGRAM BOXES" FROM MAIN MENU.

2.

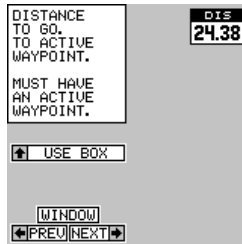

THE BOX SELECTION SCREEN APPEARS. PRESS THE RIGHT ARROW KEY UNTIL THE DESIRED BOX APPEARS.

3.

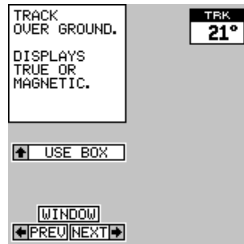

THIS IS THE FIRST WINDOW THAT WE WANT TO USE. PRESS THE UP ARROW KEY TO SELECT IT.

4.




THE FIRST BOX IS PLACED AT THE TOP. AFTER MESSAGES ERASE THEMSELVES, YOU'RE RETURNED TO THE BOX SELECTION SCREEN SHOWN IN STEP 2.

5.




WE CHOSE THIS WINDOW AS THE SECOND ONE FOR THIS GROUP. REPEAT STEPS 2 AND 3 AGAIN.

6.

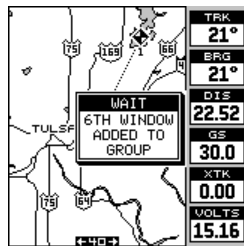


"VOLTS" IS THE LAST BOX CHOSEN FOR THIS SCREEN.

7.

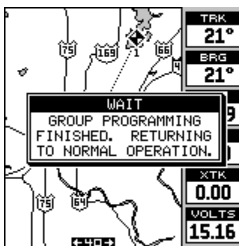

THIS MESSAGE APPEARS AFTER THE LAST BOX IS SELECTED. IT AUTOMATICALLY ERASES.

8.

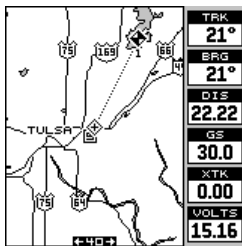

THE FINISHED SCREEN.

See the back of this manual for a complete listing of all box options.

## DATABASES

Thanks to the Jeppesen database and the AirMap's ability to save locations in memory, (waypoints) you can navigate to virtually any location. The AirMap can store up to 250 waypoints. You can store your present position, the cursor's location, or enter latitude/longitude positions as waypoint locations.

The Jeppesen database contains airport, VOR, and NDB locations, plus pertinent airport data such as com frequencies, runway information, and services (fuel availability, repairs, oxygen, etc.)

You can also create routes composed of airports, VORs, NDBs, or your own waypoints in any combination.

### Aviation Database

To use the database, first press the WPT key. The screen shown at right appears. This is the User Waypoint screen. You'll use this screen to store and recall your own locations. Now press the up arrow key. This moves the black box to the "TYPE" label at the top of the screen. Pressing the right arrow key repeatedly switches to each of the database screens in the order shown below.

AIRPORT



VOR



NDB



INTERSECTION

To find a particular airport, VOR, NDB, or intersection, first switch to the appropriate database. In this example, we'll use the airport database.

Suppose we're planning a trip to Fort Smith Regional airport in Fort Smith, Arkansas. There are three ways to find this airport in the AirMap's database. You can find it by searching through the airport identifiers (ID), airport name, or city. In this example, we know the airport identifier is FSM, so we'll move the black box to the "ID" label by pressing the down arrow key once.

TYPE	AIRPORTs
ID	00A
NAV	GO TO AIRPORT
NAME	STONE MOUNTAIN- BRITT MEML
CITY	STONE MOUNTAIN, SA
ELEVATION 966	
N 33°48.673' W 94°07.161'	
DIS 592.1 NM   BRG 95° MAG	

Select the first letter in the identifier by pressing the up or down arrow keys until the letter "F" appears in the "ID" field. When it does, press the right arrow key once. This moves the selector to the second number in the identifier field. Again, press the up or down arrow keys until the letter "S" appears.

TYPE	AIRPORTs
ID	F00
NAV	GO TO AIRPORT
NAME	JONES
CITY	BOHHAM, TX
ELEVATION 619	
N 33°36.766' W 96°10.715'	
DIS 152.1 NM   BRG 181° MAG	

Finally, press the right arrow key one more time, moving the selector to the last number in the "ID" field, then press up or down arrow keys until the letter "M" appears. The screen should look like the one at right.

TYPE	AIRPORTs
ID	FSM
NAV	GO TO AIRPORT
NAME	FT SMITH REGL
CITY	FT SMITH, AR
ELEVATION 469	
N 35°20.195' W 94°22.046'	
DIS 85.91 NM   BRG 118° MAG	

You can find an airport by using the airport name (name) or city fields the same as the ID field. Simply move the black box to the desired label, then use the arrow keys to select the name.

After you've found the airport, press the EXIT key. The screen shown at right appears.

TYPE	AIRPORTs
ID	FSM
NAV	GO TO AIRPORT
NAME	FT SMITH REGL
CITY	FT SMITH, AR
COMM FREQUENCIES	
RUNWAYS	
SERVICES	
ELEVATION 469	
N 35°20.195' W 94°22.046'	
DIS 85.91 NM   BRG 118° MAG	

At the bottom of the screen is the airport's elevation, which in this case is 469 feet. Beneath this is the airport's position, and at the very bottom of this screen in the distance and bearing from your present position to the airport.

## Communication Frequencies

To view the communication frequencies used at the selected airport, press the down arrow key, move the black box to the "COMM FREQUENCIES" label and press the right arrow key. The screen shown below appears.

TYPE	AIRPORTS
ID	FSM
NAV	GO TO AIRPORT
NAME	FT SMITH REGL
CITY	FT SMITH, AR
<b>COMM FREQUENCIES</b>	
RUNWAYS	
SERVICES	
ELEVATION 469	
N 35° 20.195' W 94° 22.046'	
DIS 85.91 NM   BRG 118° MAG	

This is the communication frequencies screen. In this example, all applicable com frequencies for Fort Smith Regional airport are shown. Also, this airport has more frequencies that can be shown on one page. Press the left or right arrow keys to view the rest of the radio information. When you're finished with this screen, press the EXIT key. The AirMap returns to the previous database screen.

<b>FSM FREQUENCIES</b>	
ATIS	126.30 MHZ
APPROACH	124.55 MHZ
APPROACH/DEPARTURE	
125.40 MHZ	075°-255°
APPROACH/DEPARTURE	
120.90 MHZ	256°-074°
TOWER CTAF	118.30 MHZ PCL
GROUND	121.90 MHZ
PREVIOUS PAGE-1 NEXT	

## Runways

To view the runway information, press the down arrow key on the airport database screen shown at the top of this page until the black box is on the "RUNWAYS" label, then press the right arrow key. A screen similar to the one at right appears.

<b>RUNWAYS/EXTENSIONS</b>	
RUNWAYS	
RUNWAY EXTENSIONS	
VIEW RUNWAYS OF SELECTED AIRPORT.	

The "runways" label is highlighted. Press the right arrow key to select it. The screen shown below appears. The active runways available at the time of your database are shown on the left side of the screen. Data for each runway is shown on the right side of the screen. In the example screen shown above, runway 7 - 25 has a hard surface, is 8000 feet long and 150 feet wide. It also has lights which are activated on 118.30 mHz.


<b>FSM RUNWAYS</b>	
PREV < 7 > (25) > NEXT	
	<b>SURFACE</b> HARD
	<b>LENGTH</b> 8000 FT
	<b>WIDTH</b> 150 FT
	<b>LIGHTS</b> 118.30 MHZ

To view the data for the other runway, press either the right or left arrow key. The screen shown at the top of the next page appears. Now information for runway 1 - 19 is shown on the right side of the screen.



If the airport has more than two runways, simply keep pressing the right or left arrow keys until the desired runway appears.

When you're finished with this screen, press the EXIT key to return to the airport database screen.

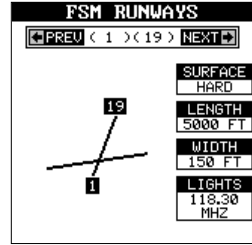


## Runway Extensions


This unit can draw an extension onto a runway to make it easier to line up to the runway on final approach. To use the extension, you must first navigate to an airport. (See the Navigation section for more details.) In this example, we're navigating to Halliburton field in Duncan, Oklahoma. Next, select "Runways/Extensions" from the "Airports" database as shown at right. The screen shown below appears.



Now highlight "Runway Extensions" on this menu and press the right arrow key.

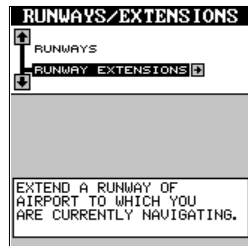


Use the left or right arrow keys to select the desired runway. In this example, we're using runway 17. Press the ENT key when the desired runway appears.

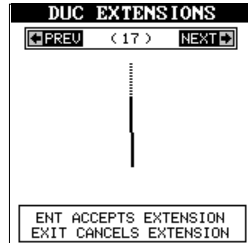

A line is drawn on the screen extending from the airport in line with the selected runway.

To turn the extension off, repeat the above steps, but press the EXIT key on the above menu.

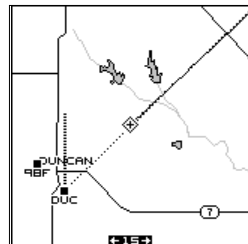

## Services

To view the services available at the airport, press the down arrow key on the AIRPORTS main menu shown at the top of the previous page until the black box is on the "SERVICES" label, then press the right arrow key. The screen at right shows. After viewing the information, press the EXIT key to return to the airport database screen.

FSM SERVICES	
OXYGEN	NOT AVAILABLE
REPAIRS	AVAILABLE
JET FUEL	AVAILABLE
AUGAS	AVAILABLE
MOGAS	NOT AVAILABLE
UNKNOWN FUEL	NOT AVAILABLE

## Other Aviation Databases

To view VOR, NDB, or intersection data, simply switch to the desired database, then use the arrow keys to view it. They work identically to the airport database.

**Note:** The VOR database as shown at right has a space to the right of the frequency box. If the VOR has DME, the letters "DME" appear in this box. If not, the box is left blank.

TYPE	UORs
ID	CNU
NAV	GO TO VOR
NAME	CHANUTE
CITY	CHANUTE, KS
FREQUENCY	109.20 MHZ
REGION	USA
N 37° 37.568'   W 95° 35.607'	
DIS 90.30 NM   BRG 2° MAG	

## USER DATABASE


The AirMap gives you the capability of creating your own database of locations, called "waypoints". These locations are stored in the "User WPTs" section of the database. You can save your present position, cursor position, or enter a latitude/longitude and save it as a waypoint.

### Saving Your Present Position as a Waypoint (Quick Save Method)

To save your present position, simply press the WPT key twice. The AirMap puts your current position into the first available waypoint number on the list. A message appears on the display telling you the waypoint number it just used. This also momentarily places you in the database menu as shown at right. Anytime a database menu is showing, simply press the WPT key once and the unit will store your present position in the waypoint list.

USER WPTs	
WPT#	001
NAV	GO TO WPT #001
NAME	WPT #1
EDIT NAME	
ED	WAYPOINT SAVED
ED	AS WPT #1
OT	
18-JUL-97 14:52	
N 36° 01.726'   W 95° 17.070'	
DIS MI   BRG MAG	
PRESS WPT FOR QUICK SAVE	

Every time you save a waypoint, the date and time are logged along with the position data. An icon symbol is also automatically assigned to the waypoint. You can edit the icon symbol, if you wish. See the ICONS section in this manual for more information.

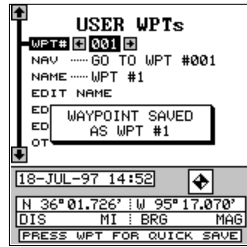


### Saving The Cursor Position as a Waypoint

When the cursor is showing on the map and you press the WPT key twice, the AirMap puts the *cursor's* position into the first available waypoint number. A message appears on the display telling you the waypoint number it just used. This also places you in the waypoint menu as shown above. Wait a few seconds and the menu will clear automatically or press the EXIT key to erase the waypoint menu.


### Saving Your Present Position as a Waypoint (Select Number Method)

The methods shown above don't let you choose the waypoint number. You can pick the waypoint number, then save your present position. To do this, first press the WPT key.

Now press the up arrow key once. This is the waypoint number selection menu. Press the left or right arrow keys until the waypoint number appears that you wish to store your present position. In this example, we're going to store a position as waypoint number 4.

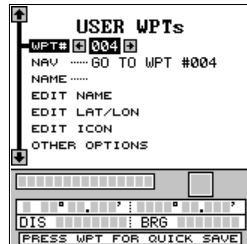

Now press the down arrow key until the "OTHER OPTIONS" label is highlighted. Press the right arrow key. The screen shown at right appears. This is the second waypoint menu page.

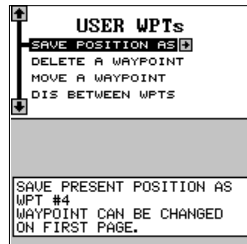

The "Save Position As" label is highlighted at the top of the list on this page. When you're at the location you wish to save, press the right arrow key. This saves your present position under the waypoint number you selected on the first page.


### Saving Cursor Position as a Waypoint (Select Number Method)

To save the cursor position under a specific waypoint number, first position the cursor at the desired position. Then follow the previous instructions for saving your present position as a waypoint using the select num-

ber method. Remember, the method of saving your present position and the cursor's position is identical.

### Edit Lat/Lon

The AirMap lets you enter any latitude/longitude using the keyboard and save it under any waypoint number, from 1 to 250. You can also change any waypoint's position using this method. To do this, first select the waypoint number. When you select the USER WPTs menu, the GPS receiver places you at the last-used waypoint number. If you want to save the location under a different waypoint number, press the up arrow key until the black box is on the "WPT #" label. Now press the left or right arrow keys until the desired waypoint number appears. In this example, we moved it to waypoint number twelve.

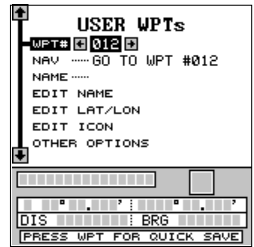

When the desired waypoint number is showing, highlight the "EDIT LAT/LON" label, then press the right arrow key. The screen shown at right appears. To enter the latitude, simply move the black box using the right and left arrow keys, then press the up or down arrow keys until the desired number appears. If you make a mistake, simply move the black box back to the number you need to change, and change it. If you want to change the entire latitude number, press the WPT key to erase it and start over. To exit completely out of this screen without saving the position, press the EXIT key.



When the latitude is the way you want it, press the right arrow key to move the black box to the longitude. Now enter the longitude.

When you're ready to save this position and return to the waypoint screen, press the ENT key. The location you entered shows at the bottom of the screen under the waypoint number you selected.



### WAYPOINT NAMES

The AirMap lets you assign a name to each waypoint. The name can have up to twelve characters. To name a waypoint, first select the waypoint number that you wish to name. (Note: A waypoint must have a position stored before you can name it.) Now highlight the "EDIT NAME" label and

press the right arrow key. A screen similar to the one at right appears.

Press the up or down arrow keys to select the first letter in the name. Press the right arrow key to move the black box to the next position in the name. Repeat this sequence until you've entered all of the letters in the waypoint name. Press the ENT key to accept this name, the WPT key to erase all characters in the name, or the EXIT key to leave this screen without saving any changes.

Tip: You can select waypoints by name instead of by number. Simply press the right arrow key while the black box is on the "Name" portion of the waypoint menu, then press the up or down arrow keys until the desired waypoint name appears.




## WAYPOINT ICONS

When you save a waypoint, an icon is automatically assigned to it. If you wish to change the icon, first press the waypoint key, select the waypoint you want to change, then highlight the "EDIT ICON" label. Now press the right arrow key. The screen shown at right appears.

Press the arrow keys to highlight the desired icon, then press the ENT key to assign it to your waypoint. The unit returns to the waypoint screen with the icon you selected assigned to the waypoint.

## Delete a Waypoint

To remove all information from a waypoint location, first select the waypoint number on the waypoint menu's first page that you wish to delete. Next, highlight the "Other Options" label. Press the right arrow key. Now highlight the "Delete A Waypoint" label. Press the right arrow key. A message appears, asking you if you really want to delete the selected waypoint. If you choose yes, all information in the selected waypoint will be deleted. The unit returns to the second waypoint menu page. You can make other waypoint selections or press the EXIT key to erase this menu.

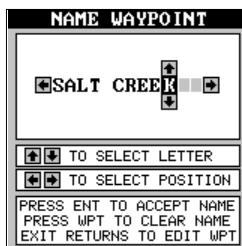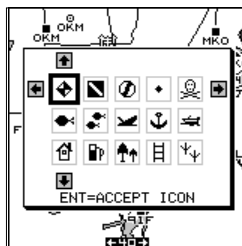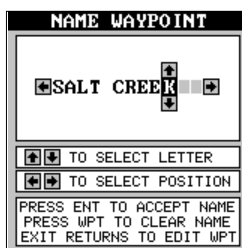

## Move a Waypoint

You can move all information from one waypoint number to another. In this example, we'll move all of the information in waypoint number one to waypoint number 10. To do this, go to the second waypoint menu page. Now highlight the "Move A Waypoint" label. Press the right arrow key. The screen shown at right appears. The "Select From" label is highlighted. Using the down arrow key, highlight either the name or waypoint number labels. You can select a waypoint to be moved by name or number. In this example, it's already on waypoint number one.

**MOVE WAYPOINT**

SELECT **FROM TO**

NAME ..... WPT #1

WPT# ..... 001

---

FROM	TO
WPT #1 WPT #1	WPT #1 WPT #1
N 36° 09.020' W 95° 50.646'	N 36° 09.020' W 95° 50.646'

PRESS WPT TO MOVE WPT

Once you have the desired waypoint showing on the screen that you're going to be moving the information FROM, then you need to choose the waypoint number that you're going to move that information TO. Highlight the "Select" label at the top of the screen, then press the right arrow key to select "TO". Now choose the waypoint number that you wish to move the information to. In this example, we selected waypoint number 10.

**MOVE WAYPOINT**

SELECT ..... **FROM TO**

NAME ..... WPT #1

WPT# [0] 010 [0]

---

FROM	TO
WPT #1 WPT #1	WPT #10
N 36° 09.020' W 95° 50.646'	.....

PRESS WPT TO MOVE WPT

When everything on this screen is correct, press the WPT key. In this example, the name, icon, and position were moved from waypoint number 1 to waypoint number 10. Press the EXIT key to erase this screen when you're finished.

**MOVE WAYPOINT**

SELECT ..... **FROM TO**

NAME ..... WPT #1

WPT# [0] 010 [0]

---

FROM	TO
WPT #1	WPT #10
.....	N 36° 09.020'
.....	W 95° 50.646'

PRESS WPT TO MOVE WPT

## Distance Between Waypoints

The AirMap can easily give you the distance between two user waypoints. To do this, first press the WPT key, select the User Waypoints menu, then highlight the "Next Page" label and press the right arrow key. Now highlight the "Dist Between WPTS" label and press the right arrow key. The screen at right appears.

"Select WPT A" label is highlighted. Now press the down arrow key to highlight either the name or waypoint number labels. You can select a waypoint by name or number. The number method is used in this example, measuring the distance between waypoint numbers three and four.

**DIST BETWEEN WPTS**

SELECT **WPT A WPT B**

NAME ..... WPT #1


WPT# ..... 001

---

WPT A	WPT B
WPT #1 WPT #1	WPT #1 WPT #1
N 36° 09.020' W 95° 50.646'	N 36° 09.020' W 95° 50.646'


DIST FROM A TO B: 0.00MI  
BRG FROM A TO B: 359° MAG

Once you have the first waypoint showing on the screen, then you need to choose the other waypoint that you're going to measure. Highlight the "Select" label at the top of the screen, then press the right arrow key to select "B". Now choose the waypoint that you wish measure. The distance and bearing from the first waypoint "A" to the second waypoint "B" shows at the bottom of the screen. You can select more waypoints to measure at this time or press the EXIT key to erase this screen.

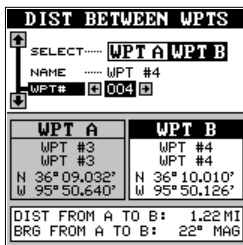

## WAYPOINT OPTIONS


You can customize the way a waypoint shows on the mapping screens. To do this, first press the MENU key, highlight the "User WPT Options" label, then press the right arrow key. The screen shown at right appears.

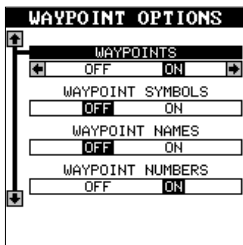

You can turn all of the user waypoints on or off (Waypoints), an icon (Waypoint Symbols), it's name (Waypoint Names), or it's number (Waypoint Numbers). Highlight the desired menu, then press the right arrow key to turn it on. Press the EXIT key to erase this menu.

## ROUTES

You can connect several user waypoints together to form a route. When you recall the route, the Air-Map will show you navigation information to the first waypoint in the route, then when you reach that waypoint, it switches to the next waypoint, and so on until you reach the last waypoint in the route.

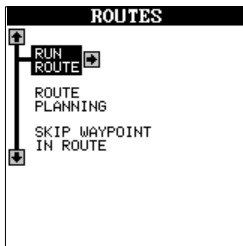

To create a route, first press the MENU key, highlight the "ROUTES" label, and press the right arrow key. The screen shown above appears. Next, highlight the "ROUTE PLANNING" label and press the right arrow key. The route planning screen shown at right appears.



This unit can store up to twenty different routes. Route number one shows on this page. If you wish to create a route using a different number, simply press the left or right arrow keys until the desired

route number appears. In this example, however, we'll use route number one.

Beneath the route number is the route name menu. If you wish to name the route, highlight the "NAME" field, then press the right arrow key. Use the arrow keys to name the route, then press the ENT key when you're finished.

Now highlight the top of the stack of gray boxes at the bottom of this screen as shown at right. This is the list of waypoints used in your route. To select the first waypoint in the route, press the right arrow key. A new menu appears as shown below.

ROUTE PLANNING			
ROUTE NO. .... 01			
NAME .....			
RUN ROUTE ..... FORWARD			
DELETE ROUTE			
NO.	NAME	BRG	DIS
TOTAL DISTANCE			0.00

You can place a waypoint using the waypoint list or from locations on the map, or both. For the first waypoint, we'll use the "Insert From WPTS" method. With the black box on this menu, press the right arrow key. A screen similar to the one below appears.

ROUTE PLANNING			
ROUTE NO. .... 01			
NAME .....			
RUN ROUTE ..... FORWARD			
DELETE ROUTE			
NO.			
TOTAL DISTANCE			0.00

	INSERT FROM WPTS
	INSERT FROM MAP
	DELETE
	WPT INFO

### Select Waypoints - Waypoint list

Select the first waypoint from the user waypoint, airports, VOR's, NDB's, or intersections menus. As you move through the list of saved waypoints, their date and time saved, icon, position, distance and bearing from your present position show at the bottom of the screen. When the desired location appears that you want to use as the first waypoint on the route, move the black box to the "Add WPT To Route" label, then press the right arrow key. The unit returns to the route planning screen with this waypoint placed in the first location on the list as shown at right.

TYPE	AIRPORTs
ID	DUK
ADD WPT TO ROUTE	
NAME	HALLIBURTON
CITY	DUNCAN, OK
COMM FREQUENCIES	
RUNWAYS	
SERVICES	
ELEVATION 1113	
N 34° 28,333'   W 97° 57,592'	
DIS 77.26 NM   BRG 226° MAG	

ROUTE PLANNING			
ROUTE NO. .... 01			
NAME .....			
RUN ROUTE ..... FORWARD			
DELETE ROUTE			
NO.	NAME	BRG	DIS
1	DUK	APT	
TOTAL DISTANCE			0.00



Continue selecting waypoints until the route is complete. As you add waypoints to the list, the bearing and distance from each waypoint to the one previous is shown to the right of the waypoint's name. In this example, the second waypoint in the list is 104 degrees and 30.75 miles from the first waypoint in the list.

ROUTE PLANNING				
ROUTE NO. .... 01				
NAME .....				
RUN ROUTE ..... FORWARD				
DELETE ROUTE				
NO.	NAME	APT	BRG	DIS
1	DUC	APT		
2	FSM	APT	73	184.2
TOTAL DISTANCE				184.2


### Select Waypoints - From Map

To add a position from the map to the route's list of waypoints, first highlight the position on the list of waypoints that you want to add the position. On the example screen at right, the third position on the list was highlighted. Next, press the right arrow key. Now highlight the "Insert From Map" label and press the right arrow key. The unit returns to the mapping screen with the cursor on. (See below.)

ROUTE PLANNING				
ROUTE# ..... 01				
NAME .....				
RUN ROUTE ..... FORWARD				
DELETE ROUTE				
NO.	NAME	TYPE		
1	WPT #1	USA		

Move the cursor (using the arrow keys) until it's on the exact location that you want to add to the route list. When it's there, press the ENT key.

As you move the cursor, a line moves with it as shown in the screen at right. This line shows you the path from the last waypoint on the list. You can continue to save waypoints on the map by moving the cursor and pressing the ENT key to save the location. When you're done, a line connects all the waypoints on the route, graphically showing you a diagram of your route. When you're finished saving locations, press the EXIT key. The unit returns to the route planning menu.

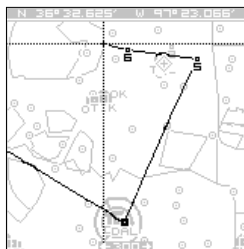

The locations you saved for your route from the map have not only been added to the route list, but have also been added to the waypoint list.

### Finishing the Route

When you've selected all of the waypoints for the route, simply press the EXIT key. Your route is saved in memory.

ROUTE PLANNING				
ROUTE NO. .... 01				
NAME .....				
RUN ROUTE ..... FORWARD				
DELETE ROUTE				
NO.	NAME	APT	BRG	DIS
1	DUC	APT		
2	FSM	APT	73	184.2
3	IDP	APT	328	128.9
4	TUL	APT	185	57.05
TOTAL DISTANCE				370.9

## Following a Route

To follow a route, first recall it by pressing the MENU key, highlighting the "ROUTES" label, then highlighting the "RUN ROUTE" label and press the right arrow key. The screen shown at right appears.

ROUTE PLANNING				
ROUTE NO. .... 01				
NAME .....				
RUN ROUTE ..... FORWARD				
DELETE ROUTE				
NO.	NAME	APT	BRG	DIS
1	DUC	APT		
2	FSM	APT	73	184.2
3	IDP	APT	328	128.9
4	TUL	APT	185	57.85
TOTAL DISTANCE 370.9				

The black box is on the "Route # 01" label. If this isn't the route you want to use, press the right or left arrow keys to switch to another one. Before starting the route, you'll need to decide if you want to start at the beginning and travel forward or start at the last waypoint in the route and travel backwards (reverse) to the first waypoint. The default is forward.

Once you determine which direction in the route you want to go, you'll need to determine the first waypoint in the list you want to start the route. Usually, it's the first waypoint, however the unit gives you several options. The default starting waypoint is the one closest to your present position. To use it, simply highlight the "START AUTO" label and press the right arrow key. To start the route using the nearest waypoint to your location, simply press the ENT key.

RUN ROUTE				
ROUTE NO. .... 01				
NAME .....				
RUN ROUTE ..... FORWARD				
AUTO START				
NO.	NAME	APT	BRG	DIS
1	DUC	APT		
2	FSM	APT	73	184.2
3	IDP	APT	328	128.9
4	TUL	APT	185	57.85
TOTAL DISTANCE 370.9				

You can start at any waypoint in the route by highlighting the desired waypoint, then pressing right arrow key. A new menu appears as shown at right. The "DIRECT TO" label is highlighted. Press the right arrow key to start the route with this waypoint. To view information (latitude/longitude, distance, bearing, etc.) about this waypoint, highlight the "WPT INFO" label and press the right arrow key. Press the EXIT key to erase the waypoint information menu.

RUN ROUTE				
ROUTE NO. .... 01				
NAME .....				
RUN ROUTE ..... FORWARD				
AUTO START				
NO.	NAME	APT	BRG	DIS
1				
2	DIRECT TO			
3	WPT INFO			
4				
TOTAL DISTANCE 370.9				

As you travel to the first waypoint, the unit shows navigation data to that waypoint. When you enter the radius around the waypoint set by the arrival alarm, the unit automatically switches to the next waypoint on the list, showing navigation data to that waypoint, and so on until the last waypoint on the route list has been reached. (Note: The arrival alarm does not have to be turned on in order to use the route feature.)

## Delete a Route

To erase a route from memory, first press the WPT key, then go to the Route Planning menu on the second user waypoint page. Switch to the route number you wish to erase, then move the black box to the "Delete Route" label. Press the right arrow key to delete it.



## NAVIGATION


### Navigate To a Database Location

The AirMap makes it easy to navigate to any waypoint in two simple steps. First, select the destination from the database, then press the key next to the "NAV GO TO ..." label. The unit immediately shows navigation information to the selected location.




In this example, we recalled Halliburton field in Duncan, Oklahoma. It's 144.1 nautical miles from our present position on a bearing of 227° magnetic. Switching to the "AIRPORTS" database (as shown above), we selected the airport. Next, we moved the black box to the "NAV GO TO AIRPORT" label and pressed the right arrow key. This started the AirMap's navigation system. It will show navigation data to the airport on all navigation and mapping screens. Use this same method to navigate to a VOR, NDB, intersection, or any user waypoint.

The mapping, navigation, and windows screens below show samples of the three navigation modes. All three are showing navigation data to the same waypoint from the same location. Simply press the PAGES key to switch between these screens.

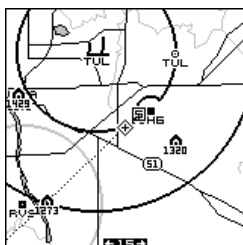


## Navigating to a cursor location


The AirMap lets you navigation to a location without storing it in the waypoint database by using the map and cursor. To do this, first switch to any map screen. Map number 1 shown at the top of the next page is used in this example.

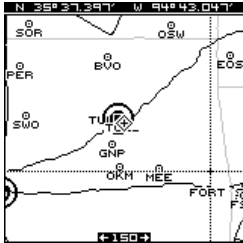

MOVE CURSOR  
TO LOCATION

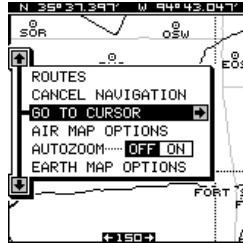

PRESS MENU KEY,  
THEN PRESS RIGHT  
ARROW KEY

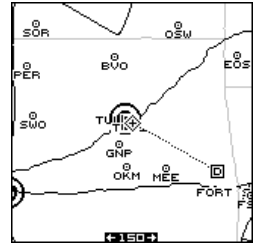


NAVIGATING TO  
CURSOR LOCATION

Now move the map cursor to the location that you want to navigate to. Next, press the MENU key. A new menu appears on the list: "Go To Cursor". Press the right arrow key. The AirMap shows nav data to the cursor location.

## Navigating to a Waypoint using the Map

The unique "birds-eye" view used by the mapping screen gives you an easy way to navigate to a waypoint. On the map screen shown at right, the diamond with a cross in it is your present position. The box with the "S" in it was your starting location when you recalled the waypoint. The dotted line is called a track line and is the shortest path from the starting location to the destination. The "D" is the destination, which can be a waypoint or cursor location. If you follow the track line, you'll reach the destination, covering the shortest distance in the least time.

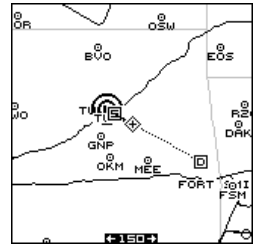


### CAUTION!

The AirMap does NOT take land features, altitudes, restricted or prohibited areas, or any other feature into account when it projects the track line on the screen. Therefore, you must use care when navigating on the track line and avoid any object that may be in your path to the destination.

## “NEAREST” FEATURE

The AirMap can show a list of the forty nearest airports, VORs, NDBs, intersections, or user waypoints to your present position.

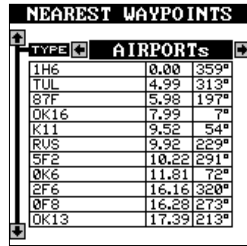

TYPE	AIRPORTs	
1H6	0.00	359°
TUL	4.99	313°
87F	5.98	197°
OK16	7.99	7°
K11	9.52	54°
RUS	9.92	229°
5F2	10.22	291°
OK6	11.81	72°
2F6	16.16	320°
0F8	16.28	273°
OK13	17.39	213°

To use this feature, simply press the Z-OUT and Z-IN keys *at the same time*. The screen shown at right appears. The nearest airports show first. The airport’s range and bearing that’s closest to your present position shows at the top of this list. The other airports are shown on the list in increasing order from your present position. To view airports not shown, press the down arrow key to the bottom of the list and hold it. The list scrolls upward until the last airport appears.

To view information about any of these airports, move the black box to the desired airport, then press the right arrow key. For the screen shown at right, we moved the box to the “TUL” airport, then pressed the right arrow key. You’ll recognize this as the airport database screen. You can view any information about this airport using the arrow and EXIT keys. If you wish to navigate to this airport, simply move the black box to the “NAV GO TO AIRPORT” label, then press the right arrow key. Press the EXIT key to return to the nearest waypoint list.



TYPE	AIRPORTs	
ID	TUL	
NAV	GO TO AIRPORT	
NAME	TULSA INTL	
CITY	TULSA, OK	
COMM FREQUENCIES		
RUNWAYS		
SERVICES		
ELEVATION 677		
N 36° 11.902' W 95° 53.294'		
DIS 4.98 NM   BRG 313° MAG		


To see the other lists, move the black box to the “TYPE” label at the top of the screen, then press the left or right arrow keys. This rotates the “nearest” feature to the other lists. All of these work identically to the airports list. You can view all data or navigate to any item on any list.

Press the EXIT to return to the navigation, mapping, or windows screen.

## CANCEL NAVIGATION

The AirMap continues to navigate to a recalled waypoint, the last waypoint in a route, or the cursor position until you stop it.

To stop the navigation function, press the MENU key, then press the up or down arrow keys until the "Cancel Navigation" label is highlighted. Press the right arrow key. The unit stops showing navigation information to the waypoint.

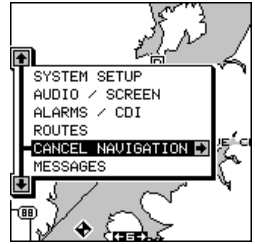

## SYSTEM SETUP

The AirMap has several menus and commands listed under the "System Setup" label on the main menu. To use these, press the MENU key, then press the up or down arrow keys until the black box is on the "System Setup" label. Press the right arrow key. The screen shown at right appears.



## TRACK HOLDING

Your AirMap has a special feature called "Track Holding" that prevents the unit from showing random numbers on the navigation screens when you're travelling less than 3 miles per hour. These random numbers are mostly caused by S/A (Selective Availability). S/A is random errors introduced into the GPS satellite network by the government to degrade the system's accuracy to the general public. The error can be as bad as 100 meters and 5 m.p.h., which is within the government's GPS specifications. You can see this happening when you're standing still with the track holding feature turned off. With it turned off, your present position will move on the map even though you're standing still.

The track holding feature works by locking the track at the last known direction when you slow below three miles per hour. Above three miles per hour, the track holding feature is disabled. This feature is automatically activated when the unit is turned on for the first time or after you preset it.

You'll see the unit's track "lockup" when you slow below 3 miles per hour. If you have the unit in the "track-up" mode, the map will also lock in the

last known track direction. When you resume speed, all features operate normally.

When you're stopped, the track holding feature is useful to prevent the annoying random numbers from appearing on the display while you're stopped. This also prevents the unit from rotating the map in all directions when it's in the "track-up" mode. This feature is useful when you're using the AirMap while taxiing, or other typically slow-speed activities.

To turn the track holding feature off, press the MENU key, then press the up or down arrow keys until the "System Setup" menu appears, then press the right arrow key. The screen shown at right appears. The track holding menu is at the top of this screen. Press the left arrow key to turn the track holding feature off. Press the EXIT key to erase this menu.



## GPS CORRECTIONS DATUM

Maps and charts are based on a survey of the area that's covered by the map or chart. These surveys are called "Datums". Maps that are created using different datums will show the same latitude/longitude in slightly different locations.

All datums are named. The GPS system is based on the WGS-84 datum, which covers the entire world. Other datums may also cover the entire world, or just a small portion. By default, the AirMap shows your position on the map using the WGS-84 datum. However, it can show your position using one of 99 different datums.

To change the datum, first highlight the "GPS Corrections" label on the "System Setup" menu and press the right arrow key. Now highlight the "Select Datum" label. Press the right arrow key. A screen similar to the one at right appears.



The WGS-84 label is highlighted. To change it, simply press the up or down arrow keys until the desired datum is highlighted, then press the ENT key. This selects the datum and erases the datum menu. The AirMap is now using the datum you selected.

## PCF (Position Correction Factor)

Another method used to make your display match a chart or map is called "PCF" or Position Correction Factor. This unit gives you the capability to move or offset the position shown on the display to match one on the chart. The unit will add this offset to all position and navigation displays at all times.

Remember, the position error on any radio navigation system is very dynamic and the PCF offset should never be used in an attempt to cancel the error.


In general terms, PCF should only be used if your map indicates what the possible error is. **PCF should always be reset to zero when you're finished with the chart.**

For example, suppose you are stopped at a location that is accurately marked on a chart. Your unit shows a longitude position that is .244 minutes east of the one on the chart and .047 minutes north latitude. Using the PCF feature, you can make the AirMap match the chart you're using. If you move, the unit will continuously add the change to all position, navigation, and mapping displays. This makes it more closely match the datum used by the chart. For this reason, you should be careful when entering the PCF offset. It's saved in memory and doesn't change when the unit is turned off. However, resetting the unit does erase the PCF offset.

To set the PCF offset, highlight the "Set Position Correction Factor" label on the GPS CORRECTIONS menu and press the right arrow key. The screen shown at right appears.

Now enter the correction for your location. Remember, this is the difference between the location shown on the present position display and the position shown on the chart. In this example, we entered 0 degrees, 0.047 minutes north latitude and 0 degrees, 0.244 minutes east longitude. That is the difference between the present position shown by the AirMap and the one on our chart.


After you've entered the latitude/longitude correction, press the ENT key to accept it. The AirMap returns to the navigation or mapping screens with the correction factor applied.

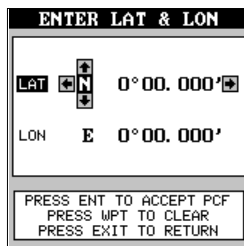



## Units of Measure


The AirMap can show its data in many different formats. For example, distance can be displayed in statute miles (MI), nautical miles (NM), or kilometers (KM).

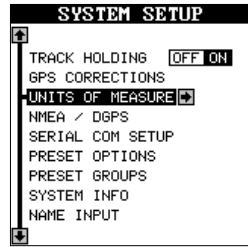

The following can be changed on the Units of Measure menu: (Defaults shown in **bold**)

- Distance ..... miles, **nautical miles**, kilometers
- Speed ..... miles per hour, **knots**, kilometers per hour
- Bearing ..... **magnetic**, true
- Altitude ..... **feet**, meters
- Clock ..... **12-hour (a.m.-p.m.)**, 24 hour
- Position Format ..... **degrees, minutes, and thousands of a minute**  
degrees, minutes, seconds  
UTM


To change a unit of measure, first select the "Units of Measure" from the "System Setup" menu. The screen shown at right appears. To change a setting on this menu, highlight the desired selection, then press the left or right arrow key. You can change one or all of the settings on this page. When you're finished, press the EXIT key.

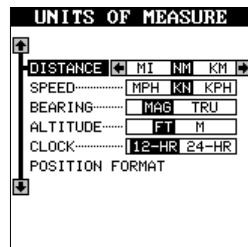

## Position Format

The AirMap can show the position in degrees, minutes, and hundredths of a minute (36° 26.106') or degrees, minutes, and seconds (36° 26' 06.3"). It can also show position in UTM's or Universal Transverse Mercator projection.

UTM's are marked on USGS topographic charts. This system divides the Earth into 60 zones horizontally, each approximately 6 degrees wide in longitude. The Earth is then divided into 20 zones vertically, which are lettered from "C" to "X". For example, 15 S means that the position shown to the right of the "S" is in grid 15 horizontally and "S" vertically. The numbers to the right of the "S" show the position in meters from points inside the zone.

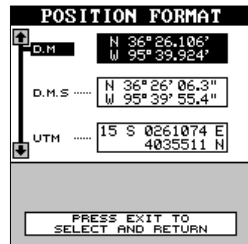

To change the position format, highlight the Units of Measure menu, then

press the right arrow key. Next, highlight the "Position Format" label and press the right arrow key. A screen similar to the one at the bottom of the previous page appears. Highlight the desired position format then press the EXIT key to select the format and erase the menu.

## NMEA / DGPS


The AirMap transmits data through the data port in the back of the unit using NMEA 0183 format, version 1.5 or 2.0. This data is used by other electronic devices such as marine autopilots for position and steering information.

DGPS on the other hand, is a data input. DGPS is an acronym for Differential Global Positioning System. Currently, it relies on a system of ground-based transmitters that send correction signals to small DGPS receivers. These receivers connect to the AirMap through the data port. DGPS gives you more accurate positions than is otherwise possible.

Lowrance makes the "Lowrance DGPS Beacon Receiver" that receives the DGPS signal broadcast by the Coast Guard at many locations around the United States. One benefit of this system is that the Coast Guard doesn't charge for the use of this service. You can attach the DGPS Beacon Receiver to your AirMap and start using it immediately. However, please note that the Lowrance DGPS Beacon Receiver is designed for permanent mount on a boat or other vehicle. It requires a four to eight-foot whip antenna.

See the sample wiring diagrams on the next page for general wiring procedures. You'll need to purchase a NDC-1 adapter cable for your AirMap Sport's data port to connect to the DGPS receiver.

(Note: Connecting power to the AirMap through the NDC cable as shown in the diagrams is optional. However, the shield wire must still be connected to ground.) Once the cables are wired, turn the AirMap on, press the menu key, and select NMEA / DGPS from the System Setup menu. A screen similar to the one at right appears.

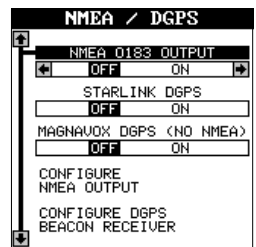


## NMEA 0183 OUTPUT

To turn the NMEA output on, highlight the "NMEA 0183 OUTPUT" menu, then press the right arrow key. If the other equipment works, then no setup will need to be performed. If your the equipment doesn't recognize the NMEA data being sent by the GPS receiver and the wiring is correct, then you may need to change the NMEA or the serial communication settings.

## Configure NMEA Output

Press the down arrow key on the “NMEA/DGPS” menu until the “Configure NMEA Output” menu is highlighted, then press the right arrow key. A screen similar to the one at right appears.

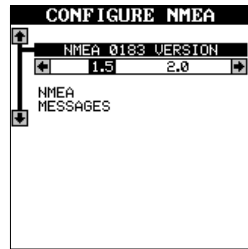


## NMEA 0183 Version

There are two versions of the NMEA data, 1.5 and 2.0. If your other equipment requires 2.0, press the right arrow key to select it.


## NMEA Sentence Selection

Some equipment requires different sentence. The AirMap default setting for these sentences is on. In other words, it automatically sends these sentences when NMEA is turned on. To turn any of these off, first highlight the “NMEA Messages” label on the “Configure NMEA” menu as shown above, then press the right arrow key. The screen shown at right appears. Now highlight the desired menu and press the left arrow key. Press the EXIT key when everything on this screen is the way you want it.

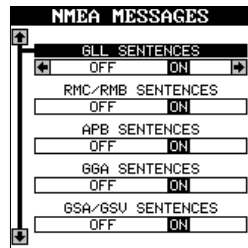


## DGPS

The AirMap will recognize Starlink® and Magnavox® DGPS receivers and compatibles. If you have either one of these receivers, simply highlight the “Starlink DGPS” or “Magnavox DGPS” label on the NMEA/DGPS menu and press the right arrow key to turn it on. (Note: If you have a Magnavox DGPS receiver connected, the AirMap can’t send NMEA data.) The DGPS data port needs to be configured next. Highlight the “Configure DGPS Beacon Receiver” label at the bottom of this screen and press the right arrow key. The screen shown below appears.

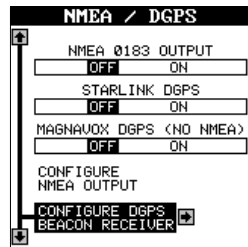


These menus select the beacon receiver’s frequency and bit rate (in bits per second). If you are using a Starlink receiver, turning the auto mode on causes the AirMap to auto-detect the frequency and bit rate.

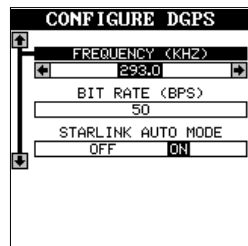

To change one of these settings, simply highlight the menu item you wish to change, then press the


NDC-1 TO AIRMAP

AIRMAP  
TRANSMITTING NMEA DATA  
TO ANOTHER DEVICE

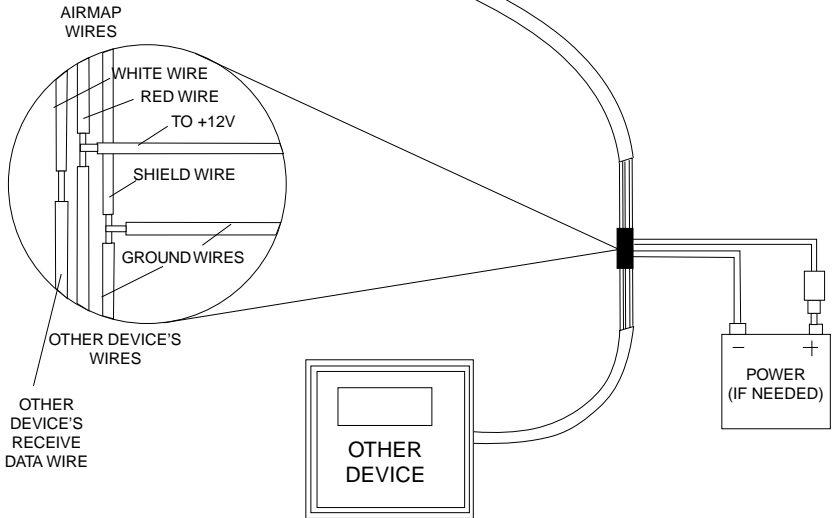

NDC-1 TO AIRMAP

AIRMAP  
RECEIVING DATA FROM  
A DGPS RECEIVER

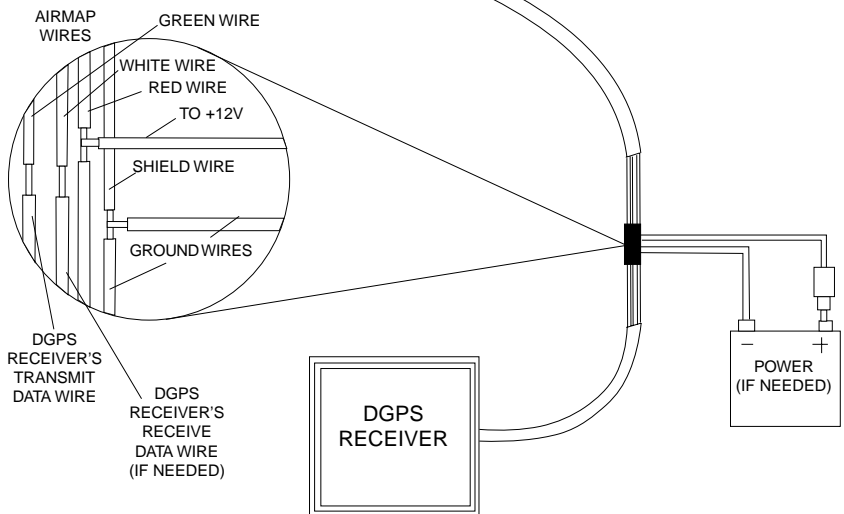

right or left arrow key until the desired number appears. Press the EXIT key when you're finished.

## SERIAL COMMUNICATIONS SETUP

To set the data port, highlight the "Serial Com Setup" on the System Setup menu. Press the right arrow key. The screen shown at right appears.

Check your DGPS receiver's manual for the proper data settings. Highlight the menu item you need to change. Press the left or right arrow keys to change them. The serial port defaults are 4800 baud, no parity, and 8 data bits. Press the EXIT key to erase this menu.



## RESET OPTIONS

To return the AirMap to its original factory settings, press the up or down arrow keys until the "Preset Options" menu on the System Setup screen is surrounded by the black box. Now press the right arrow key. A message appears, asking if you want to restore the original options. Press the left arrow key if you do, the right arrow key to quit.

If you restore the unit to the factory settings, all options such as battery level and delay, contrast, alarms, and other system choices are returned to their default values. However, no waypoints, routes, or icons are erased.



## RESET GROUPS

To return all programmed window groups and boxes on the navigation screens and MAP-3 to their factory defaults, highlight "PRESET GROUPS" on the System Setup menu and press the right arrow key.

## SYSTEM INFO

The system information screen shows the release date and the version number of the code stored inside the AirMap. To view this screen, highlight the "System Info" label on the System Setup menu. Now press the right arrow key. A screen similar to the one at right appears. Press the EXIT key when you're finished reading this screen.

(Your code version and date may differ from the one shown at right.)



## NAME

You can personalize your GPS receiver by entering your name, social security number or any I.D. you desire.

To enter a name, first highlight the “Name Input” label on the System Setup menu. Press the right arrow key. The screen shown at right appears.

This is the first name entry screen. Press the up or down arrow keys until the first letter appears that you want to use. When it does, then press the right arrow key to move to the next letter. Continue this process until the I.D. is complete. You can press the WPT key to completely erase all of the characters you entered and start over, if you need to. Pressing the EXIT key erases this screen without accepting any input. When the first name is correct, press the ENT key.



Now enter your last name, using the same method as shown above. When it's the way you want it, press the ENT key. Your I.D. is saved in permanent memory.

### IMPORTANT!

The name or number you save is written into the AirMap Sport's permanent memory. You won't be able to change it once you enter it, unless you return the unit to the factory. Make certain the name or I.D. is exactly the way you want it before pressing the ENT key!

To see your I.D., see the System Information screen. Your identification will be permanently placed on this screen.

## GPS SETUP

The GPS Setup menu has five sub-menus that affect the GPS receiver. From these menus you can turn the simulator on or off, set the update rate, initialize the GPS receiver, do a self-test on the receiver, and do a cold-start. (Note: The “Initialize GPS receiver” is covered in the “Finding Your Position” section in the front of this manual.

To view these menu items, press the MENU key, then highlight the “GPS Setup” menu. Press the right arrow key. The screen shown at right appears.



## GPS Update Rate/Battery Save

Changing the update rate conserves battery power and lengthens the battery life. The update rate is the length of time it takes the receiver to send data to the display. In other words, normally the receiver sends position data once every second. You can reduce that time to once every five seconds. However, slowing the update rate also makes it harder to use this product at very slow speeds, such as hiking. The faster the update rate, the better the unit can respond to changes in direction or speed. There is also a direct correlation between the update rate and the load on the batteries. The faster the update rate, the faster the batteries are drained.

If you wish to change the update rate, simply highlight the “GPS Update Rate (SEC)” menu, then press the left or right arrow key highlight the desired rate: 1, 3, 4, or 5 seconds. Press the EXIT key to activate your selection.

## POSITION PINNING

When using a GPS receiver at extremely low speeds, it can have trouble determining your course over ground, or direction you’re travelling. This is due in large part to SA, or selective availability. SA is small inaccuracies purposefully put into the GPS satellite’s signal by the government. This cause wide variations in the track display and other navigation displays when using the unit at slow speeds.

If you’re using the unit without DGPS and stop, the position pinning feature locks the present position indicator on the plotter until you’ve moved a short distance or exceed a very slow speed. This prevents the “wandering” plot trail seen when you’re stopped with position pinning turned off. This also affects the navigational displays.

The easiest way to see the effects of S/A is to stand still and watch your plot trail with position pinning turned off. You’ll see the present position change, speed increase and decrease, and a random plot trail on the plotter’s screen.



If you wish to turn the position pinning feature on, press the MENU key, then highlight the “GPS Setup” label and press the right arrow key. Now highlight the “Position Pinning” label. Finally, press the right arrow key.

## Execute GPS Self Test

If you suspect a problem with the GPS receiver, or just wish to test it, highlight the “Execute GPS Self Test” label on the GPS Setup menu, then

press the right arrow key. A screen similar to the one at right appears after several seconds. A message shows if the unit passed the self-test, or failed. If the unit fails the self-test, contact the Lowrance customer service department.

SELF TEST RESULTS	
ROM	0000
RAM	0000
DSP	0000
SERIAL 1 RCU ERRORS	0000
SERIAL 1 RCU BYTES	00BC
SOFTWARE VERSION	1.25

<b>RECEIVER PASSED</b>
------------------------

### Execute GPS Cold Start

When the AirMap is turned on for the first time “out of the box”, it automatically does a “cold-start”. A cold start means the unit doesn’t have any information that helps it determine which satellites are available.

If the unit can’t lock on to the satellites using the data you’ve given it, or it has trouble finding the satellites, perhaps it is using the wrong data. This can happen if you’ve entered the wrong data by accident when initializing the receiver. For example, if you entered east longitude instead of west. Or if you’ve moved a long distance with the unit turned off.

To send a cold start message to the receiver, highlight the “Execute GPS Cold Start” label on the GPS Setup menu, then press the right arrow key. A message appears, asking you if you really want to do a cold start. Follow the instructions on this message page.

GPS SETUP	
GPS UPDATE RATE (SEC)	1 3 4 5
POSITION PINNING	<input checked="" type="checkbox"/> OFF <input type="checkbox"/> ON
INITIALIZE GPS RECEIVER	
EXECUTE GPS SELF TEST	
EXECUTE GPS COLD START	


The unit will begin searching for the satellites. It can take as long as 5 minutes for it to lock on to the necessary satellites, but it usually takes less time. Remember, when it does, your local time and possibly date can be wrong. Use the method shown in the initialization section at the front of this manual to change them, if needed. Once this is done, an internal clock will keep the correct time, even when the unit is turned off. The GPS system updates this clock when the unit is locked on to the satellites.



## ALARMS

The AirMap has several alarms. You can set an arrival alarm to sound a warning tone when you cross a preset distance from a waypoint. For example, if you have the arrival alarm set to .1 mile, then the alarm will sound when you come within .1 mile of the recalled waypoint. The course deviation indicator alarm (CDI) can sound a warning when your track drifts too far to the right or left of the line to the waypoint. For example, if the alarm is set to .1 mile, then the alarm will sound if you drift .1 of a mile or more to the right or left of the line to the waypoint. The anchor alarm sounds a warning when you drift outside of a preset radius. Again, using the .1 mile as an example, if you're anchored and your seaplane or floatplane moves more than .1 of a mile, the alarm will sound.

To use any of these alarms, first press the MENU key, then select the "ALARMS/CDI" menu. A screen similar to the one shown at the top of the next page appears. Press the up or down arrow key to move the black box to the desired alarm, then press the right arrow key to turn it on.

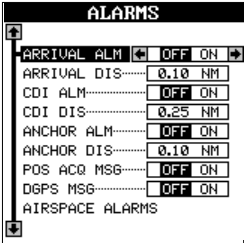

To adjust the alarm's distance, move the black box to the alarm's "DIS" menu item, then press the right or left arrow keys to increase or decrease the alarm's distance.

Press the EXIT key to erase the alarms menu.

### Important Alarm Notes:

**Anchor Alarm** - Since civilian users don't receive the accuracy given to military users, the anchor alarm may sound even when you're sitting still. This typically happens when using small (less than .05 mile) anchor alarm ranges. If you have a DGPS beacon receiver connected to the AirMap, smaller ranges may be usable.

**Arrival Alarm** - If you set the arrival alarm's distance to zero (0), and you run a route (see the routes section), the AirMap may not show navigation data to the next waypoint, once you arrive at the first one. If you use the routes feature, never set the arrival alarm to zero.

## AIRSPACE ALARMS

The AirMap has two airspace alarms that are triggered any airspace that the AirMap is capable of showing. The first alarm is a "look-ahead" alarm that (based on your current speed and track) sounds an alarm ten minutes before you reach an airspace.

The second alarm, “Distance warning” sounds when you are within 10 nautical miles of an airspace in any direction.

The limits on both the “look ahead” and the “distance warning” alarm are adjustable. To do this, first select the alarms menu from the main menu. Next, move the black box to the “Airspace Alarms” at the bottom of the screen. Press the right arrow key. The screen shown at right appears.



To adjust an alarm, or turn it on or off, move the black box to the desired label, then press the right or left arrow keys. When you have everything on this page set as desired, press the EXIT key to erase this menu and return to the ALARMS menu.



When an alarm is triggered, the AirMap flashes a message on the screen as shown at right. To view the airspace information, switch to the “Messages” mode.

Airspace alarms work in the 3D mode. In other words, not only does your position and track determine when an airspace alarm is triggered, but also your altitude (displayed on the AirMap), plus or minus 500 feet. For example, if the ceiling of an airspace that you are heading for is 4000 feet and you are travelling at 4500 feet, the airspace alarm will be triggered and a message will be shown on the display, as shown above.

## MESSAGES


At the bottom of the Alarms/CDI menu are the position (POS) and DGPS message selections. The position message (shown at right) appears for a few seconds whenever the AirMap locks onto the satellites and shows a position. It also appears when the unit loses the lock onto the satellites and cannot navigate. Pressing the EXIT key erases these messages.



The DGPS message appears whenever the unit begins or stops using DGPS data to help determine your position.

To turn on either message, select the “Alarms/CDI” menu from the main menu, then move the black box to the desired message and press the right arrow key to turn it on. Press the EXIT key to erase this screen.

All messages are stored in memory even if they're not displayed. You can view them in the message log. To do this, simply press the MENU key, then highlight the "MESSAGES" label, as shown at right, and press the right arrow key.

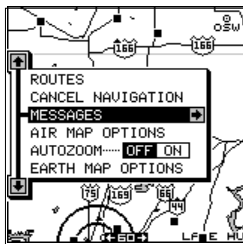

A screen similar to the one below appears. If there are more messages than this screen can hold, press the left or right arrow keys to view more pages.



Note: Airspace messages always work in the 2D mode. In other words, only your position and track determine if an airspace message is shown - not altitude. This differs from the airspace alarms.

When you're finished with this screen, press the EXIT key to erase it.

## BACKLIGHT

The AirMap's display and keyboard have lights that can be turned on for night use. To turn the lights on, simply press the PWR key. To turn them off, press the PWR key again.

If the unit is operating from the battery pack, it automatically turns the lights off after 30 seconds. This helps conserve battery power. The time is adjustable from 5 seconds to 240 seconds. Press the PWR key to turn the lights on after the unit turns them off.


To change the backlight's delay time, press the MENU key, then press the up or down arrow keys until the "AUDIO/SCREEN" menu is surrounded by the black box. Press the right arrow key. Move the black box to the "Light Delay" label at the bottom of the list. Now press the left or right arrow key until the desired time appears on the menu. Press the EXIT key when you're finished.



The backlight's brightness is also adjustable. To do this, press the up or down arrow keys until the "Light" menu is surrounded by the black box. Now press the left or right arrow key until you have the lights at the desired level. Press the EXIT key when you're finished. The default light level is maximum.

## CONTRAST

To adjust the display's contrast, press the MENU key, then move the black box to the "Audio/Screen" label, then press the right arrow key. The screen shown above appears.

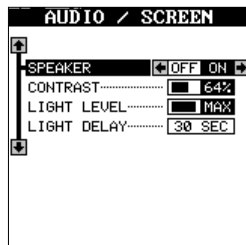

Move the black box to the "CONTRAST" label, then press the right or left arrow keys until the screen's contrast is best for the lighting conditions.

## SPEAKER

You can turn the speaker off, if desired. Turning the speaker off also turns off the audible portion of the alarms.

To turn the speaker off, press the MENU key, then move the black box to the "AUDIO/SCREEN" menu and press the right arrow key. The screen shown at right appears. Now press the left arrow key to turn the speaker off. Repeat these steps to turn the speaker on. Press the EXIT key to erase this screen.

## SIMULATOR

A simulator is built into the AirMap that has several options. You can use nearly all of the unit's features - even save and recall waypoints. This is useful for flight planning. You can "fly" the route at any speed before ever stepping foot in an airplane.

To use the simulator, press the MENU key, then press the up or down arrow keys until the "Simulator Setup" menu is surrounded by the black box. Now press the right arrow key. The screen shown at right appears.




If you simply press the right arrow key, turning the simulator on, the AirMap will start from your present position and "fly" a track of 355° at 100 knots.

To change either the track or speed, move the black box to the one you want to change, then press the right arrow key. Use the up and down arrow keys to change each number, then use the left and right arrow keys to select the other numbers that you wish to change. On the example at right, the track is being changed from 355° to 120°. When the numbers are correct, press the EXIT key.



## Starting Position


Normally, the starting position for the simulator is your present position. If you want to change the starting position, move the black box to the “SET START” label, then press the right arrow key. The screen shown at right appears.

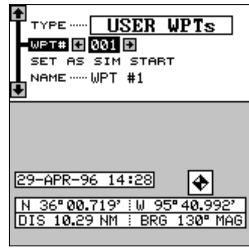


You can select any user waypoint, airport, VOR, NDB, or intersection as the simulator's starting point. Select the starting point, (See the database section for information on using the database selection) then move the black box to the “SET AS SIM START” label and press the right arrow key. The AirMap returns to the Simulator Setup menu.

## Use Arrow Keys to Fly

This option lets you change both the course and speed on the screen as the simulator is running. To do this, move the black box on the Simulator Setup screen to the “User Arrow Keys to Fly” label, then press the right arrow key. The screen shown at right appears. Use the up and down arrow keys to increase or decrease the airspeed. Use the right and left arrow keys to change the track.

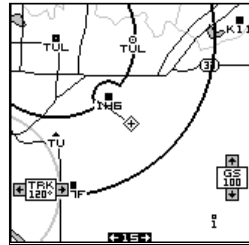

If you hold the left or right arrow keys down, the track changes at 6° per second. You can change this to 3° per second by moving the black box to the “Turn Rate” label on the simulator setup screen, then pressing the left arrow key.

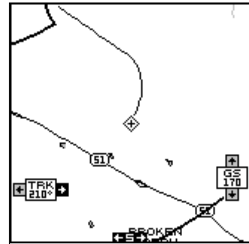

When you're finished changing the track and speed, press the EXIT key to erase the menus.

To turn the simulator off, press the MENU key, then move the black box to the “Simulator Setup” label. Finally, press the left arrow key.

Note: Your plot trail will be erased when you turn the simulator on or off.

## E6B COMPUTER

To help you with flight planning, the AirMap has a computer built into it that lets you calculate density altitude, true airspeed, wind speed and direction, plus vertical navigation.

To use this computer, first press the MENU key, then highlight the "E6B Computer" label. The screen shown at right appears. Highlight the desired mode and press the right arrow key.

E6B COMPUTER	
↑	ALTIMETER/AIRSPEED →
	WIND SPD/DIR
	VERTICAL NAVIGATION
↓	

### Density Altitude/True Airspeed

To calculate density altitude or true airspeed, simply highlight each item on the list at right. You'll need the indicated altitude "I ALT", barometric pressure (BARO) in inches of mercury, outside air temperature (TEMP), and calibrated airspeed (CAS).

ALTIMETER/AIRSPEED	
↑	I ALT [0] 00000 FT [0]
	BARO ..... 29.92" HG
	TEMP ..... +59° F
	CAS ..... 000 KN
↓	
	PRESSURE ALT 0 FT
	DENSITY ALT 0 FT
	TRUE AIRSPEED 0.0 KN

On the example shown at right, the indicated altitude is 5500 feet, barometric pressure is 30.02", outside air temperature is 67° Fahrenheit, and the calibrated airspeed is 129 knots. This gives us a pressure altitude of 5407 feet, a density altitude of 7141 feet, and a true airspeed of 143.6 knots. Obviously, you don't need an airspeed to calculate density altitude, this was done for illustration purposes.


ALTIMETER/AIRSPEED	
↑	I ALT ..... 05500 FT
	BARO ..... 30.02" HG
	TEMP ..... +67° F
	CAS [0] 129 KN [0]
↓	
	PRESSURE ALT 5407 FT
	DENSITY ALT 7141 FT
	TRUE AIRSPEED 143.6 KN

### Wind Speed/Direction

To determine the wind speed and direction, first solve for true airspeed on the previous screen. Then, highlight "Wind Spd/Dir" on the "E6B Computer" menu. A screen similar to the one at right appears. With true airspeed solved, the only other thing necessary for the unit to determine the wind is your course over ground (CRS). In this example,

WIND SPD/DIRECTION	
CRS	[0] 171° MAG [0]
TAS	..... 0144.7 KN
GROUND SPEED	..... 139 KN
TRACK	..... 167° MAG
WIND SPEED	11.5 KN
WIND DIR	234° TRU
HEAD WIND	6.0 KN


our course is 171° magnetic. This gives us a wind speed of 11.5 knots on a bearing of 234° true, for a 6 knot headwind.

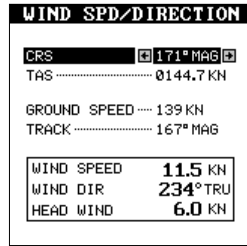


To return to a navigation or mapping screen, simply press the EXIT key twice.

### Vertical Navigation


The AirMap can help you decide when to let down for an approach to an airport. To use this feature, first press the MENU key, then highlight the “E6B Computer” label. Now highlight the “Vertical Navigation” label as shown at right and press the right arrow key. A screen similar to the one below appears.

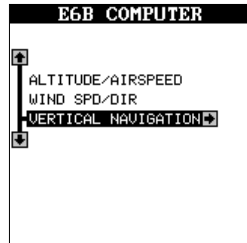

This is the vertical navigation screen. We are travelling to the Wichita Mid-Continent airport in Wichita, Kansas. It's identifier is shown at the bottom of the screen - ICT. We are travelling at 4500 feet, and need to be at the pattern altitude (about 2300 feet) by 5 nautical miles from the airport using a 450 fpm descent.

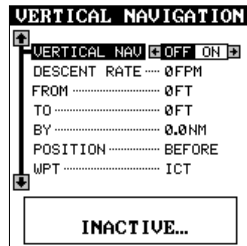

After determining the above data, highlight each item on this screen and enter the data. When you're finished, highlight the “Vertical Nav” label at the top of the screen and press the right arrow key. A screen similar to the one at right appears.

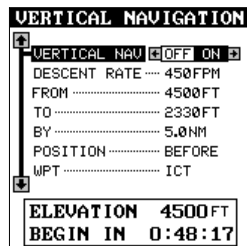


The solution to our vertical navigation problem shows at the bottom of the screen. Our current altitude is 4500 feet and at our current airspeed, we should begin our descent in 48 minutes and 17 seconds. If we maintain a 450 fpm descent in about 48 minutes, then we should reach pattern altitude 5 nautical miles before we reach the airport.

## BATTERIES

When using the AirMap with batteries, the backlights automatically turn off after 30 seconds. (Remember, you can change the time interval.) Pressing the PWR key turns the lights on again.

If the batteries become weak, the message shown at right appears on the display. When the battery voltage drops below a certain level, the unit automatically turns itself off. The unit can shut off anytime after displaying the "Low Battery" message without further notice.

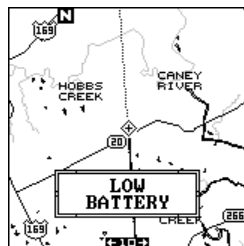

When switching from external power to the batteries, a tone sounds which alerts you to the fact that you're now on battery power.

Store your unit with the battery pack attached. Do not remove the batteries. This will increase the internal memory's battery life.

## DEFINITION OF TERMS/ABBREVIATIONS

Due to space considerations, the digital displays use abbreviations for some names. They are as follows:

- ALT ..... Altitude - Your height above sea level.
- BRG ..... Bearing - The direction from your present position to a waypoint.
- CLOCK ..... Your local time.
- TRK ..... Track - The direction you're travelling.
- DIS ..... Distance - Distance remaining between your present position and a waypoint.
- DNT/UPT ..... Countdown timer (DNT) and Count up timer (UPT)
- ETE ..... Estimated Time En route
- FIX ..... A measure of your receiver's position quality. A fix of 1 is bad, 9 is the best.
- ICON ..... A symbol you can place on the map, representing a landmark.
- POSITION .... Your present position.
- GS ..... Ground Speed - Your actual speed.
- TTG ..... Time To Go - Time remaining at your present speed until you reach a waypoint.
- VOLTS ..... Electrical system voltage.
- VMG ..... Velocity Made Good - Your ground speed towards a recalled waypoint, airport, etc.
- XTK ..... Cross Track Error - Shows your distance to the **side** of the desired course line.



**NOTICE!**  
**JEPPESEN DATABASE UPGRADE**

The data inside the Jeppesen database cartridge on the back of your AirMap is a combination of Lowrance Avionics and Jeppesen. Database updates are made based upon a data cartridge exchange program. Unlike other manufacturers, you don't need to return your AirMap for the Jeppesen database upgrade, only the Jeppesen cartridge. Under this program you will receive a new data cartridge and then return the expired cartridge. The expired cartridge must be returned to avoid a US \$75.00 surcharge. A \$75.00 surcharge will be assessed for each data cartridge not returned to LEI Extras, Inc. within 30 days of the shipment of the updated cartridge.

Updates to the aviation database are available as follows:

1. A onetime no-charge\* update is available in the event that the database enclosed in the AirMap at the time of purchase has expired. This update offer is valid during the first 30 days from original purchase and dated proof of purchase is required.

2. Additional updates are available under either of the following options:

“On-request” non-subscription onetime update ..... US \$75.00  
or

Annual subscription consisting of 13 updates ..... US \$795.00  
(once every 28 days)

For update service, please contact:

LEI Extras, Inc.  
12000 E. Skelly Drive  
Tulsa, OK USA 74128

U.S. residents can call 1-800-324-0045  
International customers please call 918-438-8686  
All customers can also fax: 918-234-1710

The aviation data update service for your Lowrance Avionics portable GPS receiver consists of copyrighted data compilations owned by Jeppesen Sanderson, Inc., which have a limited, non-exclusive license to use as specifically set forth herein. You may not copy, distribute or use any portion of said copyrighted subject matter, except in connection with the ordinary and intended use of the GPS receiver.

## WINDOW BOXES

These boxes are used on Map 3 and Nav 1 only.

DISTANCE TO GO, TO ACTIVE WAYPOINT.  
MUST HAVE AN ACTIVE WAYPOINT.

**DIS**  
**142.4**

↑ USE BOX

WINDOW

← PREVIOUS →

1

BEARING TO ACTIVE WAYPOINT.  
MUST HAVE AN ACTIVE WAYPOINT.  
TRUE OR MAGNETIC.

**BRG**  
**215°**

↑ USE BOX

WINDOW

← PREVIOUS →

2

TRACK OVER GROUND.  
DISPLAYS TRUE OR MAGNETIC.

**TRK**  
**217°**

↑ USE BOX

WINDOW

← PREVIOUS →

3

GPS ALTITUDE  
MUST HAVE AT LEAST 4 SATELLITES TRACKING.

**ALT**  
**0**

↑ USE BOX

WINDOW

← PREVIOUS →

4

VELOCITY MADE GOOD TOWARD ACTIVE WAYPOINT.  
MUST HAVE AN ACTIVE WAYPOINT.

**VMG**  
**99.9**

↑ USE BOX

WINDOW

← PREVIOUS →

5

GROUND SPEED.

**GS**  
**100**

↑ USE BOX

WINDOW

← PREVIOUS →

6

DIGITAL COURSE DEVIATION INDICATOR.  
MUST HAVE AN ACTIVE WAYPOINT.

**XTR**  
**1.83**

↑ USE BOX

WINDOW

← PREVIOUS →

7

EXPECTED TIME EN ROUTE.  
MUST HAVE AN ACTIVE WAYPOINT.

**ETE**  
**1:21:23**

↑ USE BOX

WINDOW

← PREVIOUS →

8

DIGITAL CLOCK.  
DISPLAYS LOCAL TIME.

**CLOCK**  
**12:38:52**

↑ USE BOX

WINDOW

← PREVIOUS →

9

DIGITAL CLOCK.  
DISPLAYS UTC TIME.

**UTC**  
**00:39:21**

↑ USE BOX

WINDOW

← PREVIOUS →

10

DIRECTION INDICATOR.  
POINTS IN RELATIVE DIRECTION TO ACTIVE WAYPOINT.

**CURSOR**  
↑

↑ USE BOX

WINDOW

← PREVIOUS →

11

BATTERY VOLTAGE.  
DISPLAYS VOLTAGE OF BATTERY PACK OR EXTERNAL POWER.

**VOLTS**  
**15.16**

↑ USE BOX

WINDOW

← PREVIOUS →

12

DISPLAYS  
CURRENT  
POSITION  
FIX.

FIX  
NONE

↑ USE BOX

WINDOW

← PREVIOUS → NEXT →

13

INTENDED  
COURSE  
TO ACTIVE  
WAYPOINT.  
  
TRUE OR  
MAGNETIC.

CRS  
216°

↑ USE BOX

WINDOW

← PREVIOUS → NEXT →

14

EXPECTED  
TIME  
OF  
ARRIVAL

ETA  
01:59:43

↑ USE BOX

WINDOW

← PREVIOUS → NEXT →

15

TYPE OF  
WAYPOINT  
AND WAYPOINT  
IDENTIFIER.  
  
MUST HAVE  
AN ACTIVE  
WAYPOINT.

WPT  
CURS

↑ USE BOX


WINDOW

← PREVIOUS → NEXT →

16

# WINDOW GROUPS

This is a listing of window groups A through O.

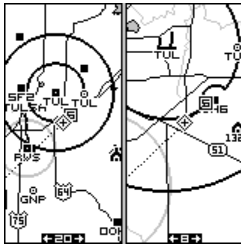

A



B



C




D



E




F

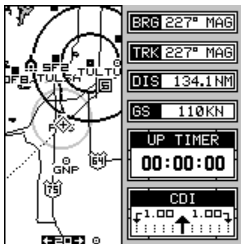

G



H

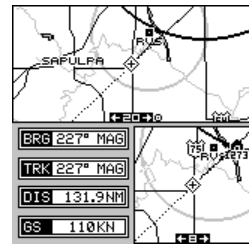

I




J




K



L

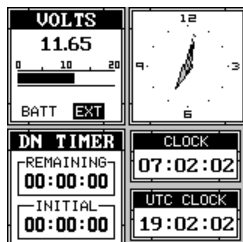

M

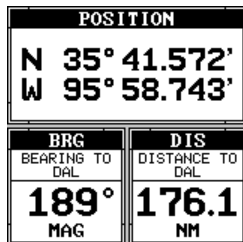

N

<b>SATELLITE INFO</b>					
CHN	PRN	TRK	ELV	AZM	SNR
1	28	T	25°	44°	44
2	27	T	40°	312°	45
3	29	T	18°	170°	43
4	2	T	24°	264°	44
5	19	T	72°	340°	48
<b>FIX</b>					
FIX 9					
HOOP 1.35					
GDOOP 2.74					
PDOOP 2.46					
UDOP 2.06					
TDOP 1.21					
<b>SATS</b>					
SATELLITES IN VIEW					
19 31 18 27					
28 2 29					

O

## Lowrance's UPS Return Service - U.S.A. Only

Lowrance Electronics and United Parcel Service (UPS) are proud to offer all of our customers free shipping for all units sent to us for repair or service. If you have to send this unit to the factory, and you are in the continental United States, use the enclosed UPS shipping label for easy, free shipping to our factory customer service department. There are six easy steps:

1. Call Lowrance at the toll-free number on the back of this manual for a Return Authorization (RA) number and instructions about what accessories to return. **Do not return a product to the factory without a Return Authorization (RA) Number!**
2. Pack your unit and any accessories in the original shipping container, if possible. **Be sure to include proof of purchase for warranty verification!**
3. Write a brief note detailing the problem you're having with the unit. Please include your name, address, and daytime telephone number.
4. Please include payment for non-warranty repairs. Check, money order, Visa, or MasterCard may be used.
5. Fill in your name, address, zip code, date, and RA number in the blanks provided on the UPS form included with your unit.
6. Attach the label to the shipping box, tear off the tab for your receipt and give the package to any UPS driver or take the package to any UPS Customer Center. You will not be charged for this shipment.

That's it! Your unit will be shipped to Lowrance's customer service department at no charge to you. Units under warranty will be returned to you at no charge.

### NOTE!

Lowrance will pay UPS surface shipping charges both to and from the factory for this unit in the event it needs repair. Your unit is insured against loss or shipping damage when you use the enclosed UPS label.

This UPS shipping offer is good only in the continental United States (excludes Alaska and Hawaii).

**KEEP THIS LABEL!  
YOU WILL NEED IT IF YOU EVER NEED TO RETURN YOUR UNIT TO  
THE FACTORY FOR REPAIR.**

### **Accessory Ordering Information**

To order accessories such as power cables or transducers, please contact:

1) Your local avionics dealer. Most quality dealers that handle aircraft electronic equipment should be able to assist you with these items. Consult your local telephone directory for listings.

2) LEI Extras, Inc. P.O. Box 129 Catoosa, OK 74015-0129  
or call  
800-324-0045  
(USA orders only.)

Lowrance Electronics may find it necessary to change or end our shipping policies, regulations, and special offers at any time. We reserve the right to do so without notice.

## **LOWRANCE AVIONICS FULL ONE-YEAR WARRANTY**

"We", "our", or "us" refers to LOWRANCE AVIONICS, a division of LEI, the manufacturer of this product. "You" or "your" refers to the first person who purchases this product as a consumer item for personal, family, or household use.

We warrant this product against defects or malfunctions in materials and workmanship, and against failure to conform to this product's written specifications, all for one year (1) from the date of original purchase by you. WE MAKE NO OTHER EXPRESS WARRANTY OR REPRESENTATION OF ANY KIND WHATSOEVER CONCERNING THIS PRODUCT. Your remedies under this warranty will be available so long as you can show in a reasonable manner that any defect or malfunction in materials or workmanship, or any non-conformity with the product's written specifications, occurred within one year from the date of your original purchase, which must be substantiated by a dated sales receipt or sales slip. Any such defect, malfunction, or non-conformity which occurs within one year from your original purchase date will either be repaired without charge or be replaced with a new product identical or reasonably equivalent to this product, at our option, within a reasonable time after our receipt of the product. If such defect, malfunction, or non-conformity remains after a reasonable number of attempts to repair by us, you may elect to obtain without charge a replacement of the product or a refund for the product. THIS REPAIR, REPLACEMENT, OR REFUND (AS JUST DESCRIBED) IS THE EXCLUSIVE REMEDY AVAILABLE TO YOU AGAINST US FOR ANY DEFECT, MALFUNCTION, OR NON-CONFORMITY CONCERNING THE PRODUCT OR FOR ANY LOSS OR DAMAGE RESULTING FROM ANY OTHER CAUSE WHATSOEVER. WE WILL NOT UNDER ANY CIRCUMSTANCES BE LIABLE TO ANYONE FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR OTHER INDIRECT DAMAGE OF ANY KIND.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

This warranty does NOT apply in the following circumstances: (1) when the product has been serviced or repaired by anyone other than us, (2) when the product has been connected, installed, combined, altered, adjusted, or handled in a manner other than according to the instructions furnished with the product, (3) when any serial number has been effaced, altered, or removed, or (4) when any defect, problem, loss, or damage has resulted from any accident, misuse, negligence, or carelessness, or from any failure to provide reasonable and necessary maintenance in accordance with the instructions of the owner's manual for the product.

We reserve the right to make changes or improvements in our products from time to time without incurring the obligation to install such improvements or changes on equipment or items previously manufactured.

This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

REMINDER: You must retain the sales slip or sales receipt proving the date of your original purchase in case warranty service is ever required.

**LOWRANCE AVIONICS**  
12000 E SKELLY DR TULSA, OK 74128  
(800) 324-4740



## DATABASES LICENSE AGREEMENT

THIS IS A LEGAL AGREEMENT BETWEEN THE END-USER WHO FIRST PURCHASES THIS PRODUCT AS A CONSUMER ITEM FOR PERSONAL, FAMILY, OR HOUSEHOLD USE (“YOU”) AND LOWRANCE ELECTRONICS (“WE”, “OUR”, OR “US”). USING THE PRODUCT ACCOMPANIED BY THIS LICENSE AGREEMENT CONSTITUTES ACCEPTANCE OF THESE TERMS AND CONDITIONS. IF YOU DO NOT ACCEPT ALL TERMS AND CONDITIONS, PROMPTLY RETURN THE PRODUCT TO US VIA A TRACEABLE DELIVERY METHOD, AND YOUR MONEY WILL BE REFUNDED.

1. This License Agreement applies to the one or more databases that your product may contain. We refer to these singly as a “Database” and together as the “Databases.” Your product may thus include the “WBS Database” which contains worldwide background surface mapping data, the “SmartMap Database” which contains inland mapping data, the “C-Map Database” which contains cartographic data, or other Databases.
2. The Databases that your product may contain are licensed, not sold. We grant to you the nonexclusive, nonassignable right to use these Databases for supplemental navigation reference purposes, but only as long as you comply with the terms and conditions of this License Agreement. We reserve the right to terminate this license if you violate any aspect of this License Agreement. You are responsible for using official government charts and prudent navigation for safe travel.
3. The Databases housed in your product are protected by the copyright notices appearing on the product or its screen(s). You may NOT modify, adapt, translate, reverse engineer, decompile, disassemble, rent, lease, or resell any Database, and you may NOT create derivative works based upon any Database or its contents.. Any unauthorized reproduction, use, or transfer of a Database may be a crime and may subject you to damages and attorney fees.
4. This License Agreement will terminate immediately without prior notice from us if you fail to comply with or violate any of the provisions of this Agreement. Upon termination, you will promptly return all products containing one or more Databases to us.
5. Prices and programs are subject to change without notice.
6. This License Agreement shall be governed by the laws of the State of Oklahoma and comprises the complete and exclusive understanding between you and us concerning the above subject matter.

## DATABASES LIMITED WARRANTY

"We", "our", or "us" refers to Lowrance Electronics Inc., the manufacturer of this product. "You" or "your" refers to the first person who purchases the product as a consumer item for personal, family, or household use. The Databases Limited Warranty applies to the one or more databases that your product may contain. We refer to each of these as a "Database" or together as the "Databases." Your product may thus include the "WBS Database" which contains worldwide background surface mapping data, the "SmartMap Database" which contains inland mapping data, the "C-Map Database" which contains cartographic data, or other Databases.

We warrant to you that we have accurately compiled, processed, and reproduced the portions of the source material on which the Databases are based. However, we are under no obligation to provide updates to the Databases, and the data contained in the Databases may be incomplete when compared to the source material. WE MAKE NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND ABOUT THE ACCURACY OF THE SOURCE MATERIAL ITSELF, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

If there is a defect in any Database, your exclusive remedy shall be, at our option, either a refund of the price you paid for the product containing the defective Database or a replacement of such product. WE WILL NOT UNDER ANY CIRCUMSTANCES BE LIABLE TO ANYONE FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR OTHER INDIRECT DAMAGE OF ANY KIND.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

This warranty does NOT apply in the following circumstances: (1) when the product has been serviced or repaired by anyone other than us, (2) when the product has been connected, installed, combined, altered, adjusted, or handled in a manner other than according to the instructions furnished with the product, (3) when any serial number has been effaced, altered, or removed, or (4) when any defect, problem, loss, or damage has resulted from any accident, misuse, negligence, or carelessness, or from any failure to provide reasonable and necessary maintenance in accordance with the instructions of the owner's manual for the product.

We reserve the right to make changes or improvements in our products from time to time without incurring the obligation to install such improvements or changes on equipment or items previously manufactured.

This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

Your remedies under this warranty will be available so long as you can show in a reasonable manner that the defect occurred within one (1) year from the date of your original purchase, and we must receive your warranty claim no later than 30 days after such 1-year period expires. Your claim must be substantiated by a dated sales receipt or sales slip.

## **How to Obtain Service (Canadian Customers Only)**

We back your investment in quality products with quick, expert service and genuine Lowrance replacement parts. If you need service or repairs, contact the Lowrance Factory Customer Service Department at the toll-free number listed below. A technician may be able to solve the problem and save you the inconvenience of returning your unit. You will be asked for your unit's serial number.

**800-324-4740**

Canada Only. Monday through Friday 8:00 A.M. - 8:00 P.M. Central Time.

When sending a product for repair, please do the following:

1. Always use the original shipping container and filler material the product was packed in when shipping your product.
2. Always insure the parcel against damage or loss during shipment. Lowrance does not assume responsibility for goods lost or damaged in transit.
3. For proper testing, repair, and service, send a brief note with the product describing the problem. Be sure to include your name, return shipping address, and a daytime telephone number.

## **How to Obtain Service (International Customers Only - Except Canada)**

If you need service or repairs, contact the dealer in the country you purchased your unit.

**WARRANTY REPAIR WILL BE HONORED ONLY IN THE  
COUNTRY UNIT WAS PURCHASED.**

Please follow the shipping instructions shown below on this page if you have to mail your unit to the dealer. For proper testing, repair, and service, send a brief note with the product describing the problem. Be sure to include your name, return shipping address, and a daytime telephone number.

## **Accessory Ordering Information - All Countries**

To order accessories such as power cables or transducers, please contact:

1. Your local dealer. Most quality dealers that handle GPS navigation equipment should be able to assist you with these items. Consult your local telephone directory for listings.
2. Canadian customers only can write:  
Lowrance/Eagle Canada, 919 Matheson Blvd., E. Mississauga, Ontario L4W2R7  
or fax 416-629-3118

## **How to Obtain Service - U.S.A. Only**

We back your investment in quality products with quick, expert service and genuine Lowrance® replacement parts. If you're in the United States and you have questions, please contact the Factory Customer Service Department using our toll-free number listed below. You must send the unit to the factory for warranty service or repair. Please call the factory before sending the unit. You will be asked for your unit's serial number. Use the following toll-free number:

**800-324-4740**

U.S.A. only. Monday through Friday 8:00 A.M. - 8:00 P.M. Central time, except holidays.

Your unit is covered by a full one-year warranty. (See page 84 inside this manual for complete warranty details.) If your unit fails and the failure is not covered by the original warranty, Lowrance has a flat-rate repair policy that covers your unit and accessories packed with the unit at the factory. There is a 180-day warranty on all non-warranty repairs from the factory, which is similar to the original warranty, but is for 180 days rather than one year. For further details, please call us at the above number.

Lowrance also gives you free UPS shipping from anywhere in the continental United States both to and from the factory for all warranty repairs. You can also use the enclosed UPS shipping label for non-warranty shipments. See page 82 for more information. Remember, non-warranty repairs are subject to Lowrance's published flat-rate charges and 180-day warranty.